



P149SIH
F14SIH
F14SWH

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/register

Code No. DC68-03147M-03_EN



features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its specialised Eco Bubble function to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and pleasant as possible.

- **Energy Saving**

This model offers more efficient energy use compared to standard A rated machine with the special Bubble generator system and Samsung Inverter motor.

- **Eco Bubble Wash**

Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

- **Less Noise & Vibration**

This Samsung washer performs very quietly minimizing noise and vibration with smart control technology, which enables it to maintain the lowest possible vibration. Thus, the drum keeps perfect balance.

- **Quick Wash**

No time to waste! Quick Wash program can help your busy life - now you can wash your favorite clothes (up to 2Kg) in 15 minutes!

- **Eco Drum Clean**

Using Eco Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.

- **Baby Care**

Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin. These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

- **Hand Wash**

Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Delay End**

Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Child Lock**

The Child Lock function ensures that curious little hands are kept out of your washing machine. This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Digital Graphic Display**

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The “**Troubleshooting and information codes**” section on page 37 tells you what to do if something goes wrong with your new washing machine.

safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

 WARNING	Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.
 CAUTION	Hazards or unsafe practices that may result in personal injury and/or property damage.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.

Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.

-  Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

safety information



SEVERE WARNING SIGNS FOR INSTALLATION



The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220-240 V / 50 Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.



This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.



Do not install this appliance near a heater, inflammable material.

Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.



CAUTION SIGNS FOR INSTALLATION



This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.



SEVERE WARNING SIGNS FOR USING



If the appliance is flooded, Turn off the water & power supply immediately and contact your nearest service centre.

- Do not Touch the power plug with wet hands.
- Failure to do so may cause electric shock.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

safety information

-  Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance.

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.

-
-  Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as copper, steel wire, etc.) other than the standard fuse.

- When repairing or reinstalling the appliance is required, contact your nearest service centre.

- Failure to do so may result in electric shock, fire, problems with the product, or injury.

-
-  If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.



CAUTION

CAUTION SIGNS FOR USING



When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.

Open the Water Tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Take care that the rubber seal and the front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.)

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

safety information

- ❑ Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen Bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as Bedding in the washing net.

- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.



SEVERE WARNING SIGNS FOR CLEANING



Do not clean the appliance by spraying water directly onto it.

Do not use the strong acid cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

contents



SETTING UP YOUR WASHING MACHINE	13	13	Checking the parts
		14	Meeting installation requirements
		14	Electrical supply and grounding
		14	Water Supply
		15	Drain
		15	Flooring
		15	Surrounding temperature
		15	Alcove or closet installation
		15	Installing your washing machine
WASHING A LOAD OF LAUNDRY	21	21	Washing for the first time
		21	Basic instructions
		22	Using the control panel
		25	Child lock
		25	Sound off
		26	Delay end
		26	My cycle
		27	Eco Bubble
		28	Washing clothes using the cycle selector
		29	Washing clothes manually
		29	Laundry guidelines
		30	Detergent and additives information
		30	Which detergent to use
		31	Detergent drawer
		31	Liquid Detergent (Selected models)
CLEANING AND MAINTAINING YOUR WASHING MACHINE	32	32	Eco Drum Clean
		33	Draining the washing machine in an emergency
		34	Cleaning the debris filter
		34	Cleaning the exterior
		35	Cleaning the detergent drawer and drawer recess
		35	Cleaning the water hose mesh filter
		36	Repairing a frozen washing machine
		36	Storing your washing machine
TROUBLESHOOTING AND INFORMATION CODES	37	37	Check these points if your washing machine...
		38	Information codes
CYCLE CHART	39	39	Cycle chart
APPENDIX	40	40	Fabric care chart
		40	Protecting the environment
		40	Declaration of conformity
		41	Specifications

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

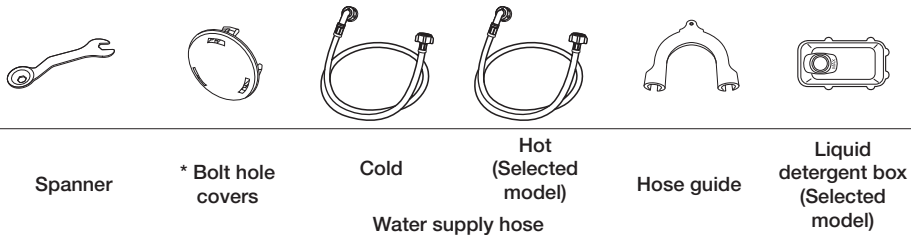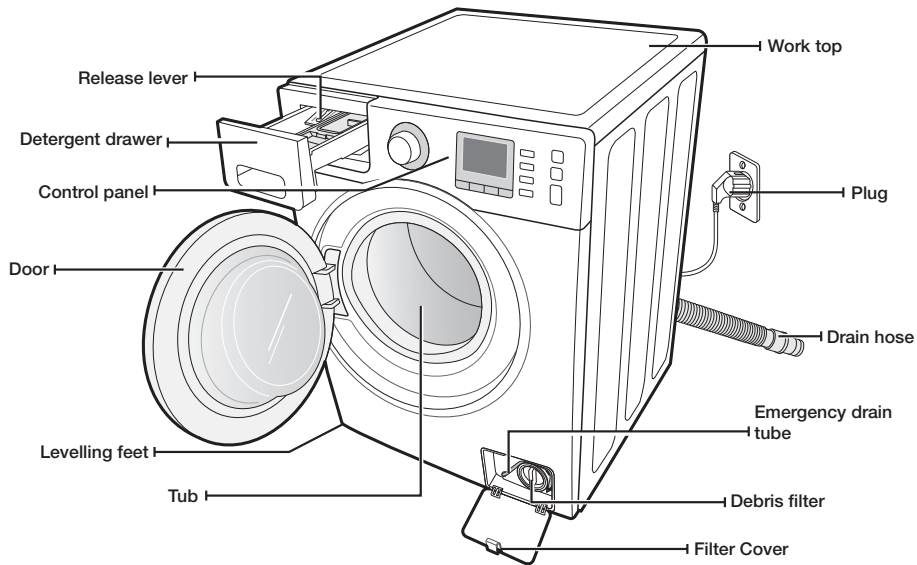

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding



Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- AC 220-240 V / 50 Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120 cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.



Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:

- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.



Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

Drain

Samsung recommends a standpipe height of 65 cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm

Rear – 50 mm

Top – 25 mm

Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location



Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 °C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord


setting up your washing machine

STEP 2


Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.


1. Loosen all the bolts with the supplied wrench.

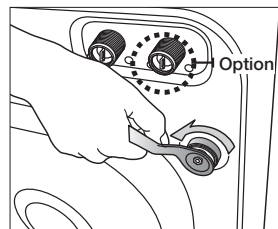

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

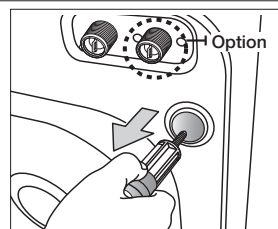

3. Fill the holes with the supplied plastic covers.

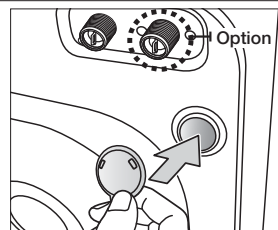

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.



WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.


STEP 3

Adjusting the Levelling feet


 When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.

2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

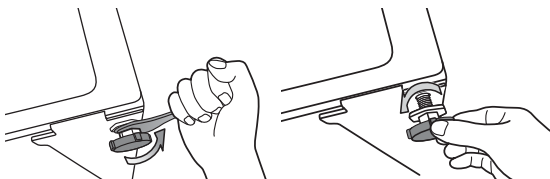

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

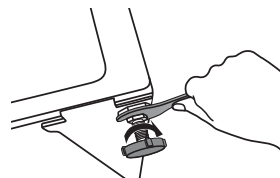

STEP 4


Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

 The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

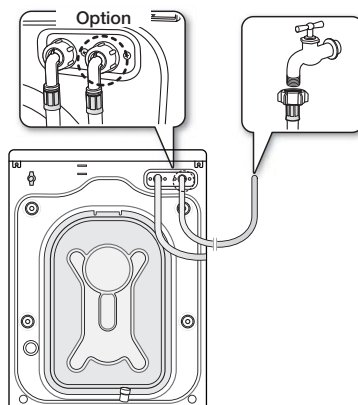


For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.


setting up your washing machine

Connecting the water supply hose


1. Remove the adaptor from the water supply hose.

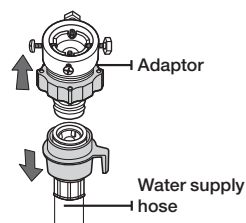

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.




3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

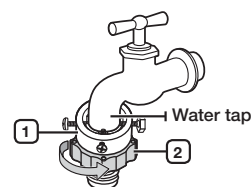


4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

-  After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

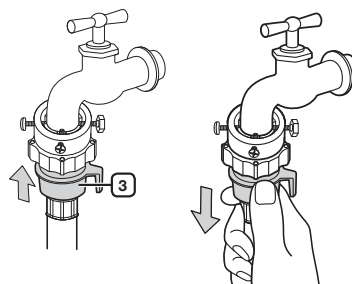


5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

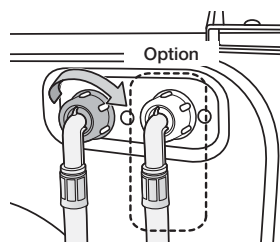


6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.



Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

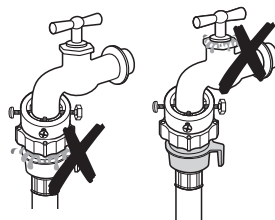

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

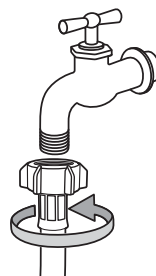


Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

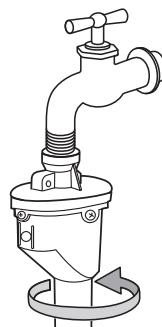


setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. **Over the edge of a wash basin:** The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.
2. **In a sink drain pipe branch:** The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

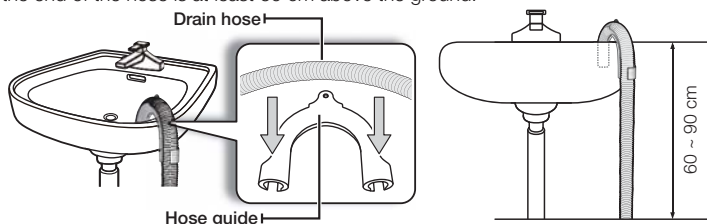


3. **In a drain pipe:** We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.



The standpipe drain requires;

- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

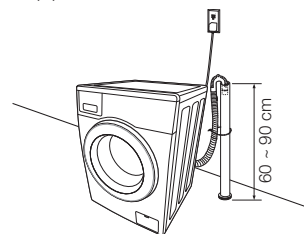

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)



Test run

Make sure that you install your washing machine correctly by running the **Rinse+Spin** cycle after the installation is complete.

STEP 6

Calibration mode

Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

1. Remove laundry or any contents in the machine and turn off the machine.
2. Press the **Temp** button and **Delay End** button simultaneously, and press the **Power** button in addition. Then the machine turns on.
3. Press the **Start** button to activate "Calibration Mode".
4. The drum rotates clockwise and counterclockwise approximately for 3 minutes.
5. When "Calibration Mode" is finished, "END(En)" appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

washing a load of laundry


With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

 Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment ① in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

 This will remove any water that might be left over in the machine from the manufacturer's test run.

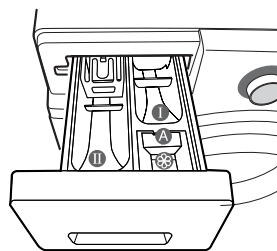

Compartment ①: Detergent for prewash, or starch.

Compartment ②: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

 To use liquid detergent, use the liquid detergent box (refer to page 31 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment ③: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A").

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.


 Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 30.

-  • Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

washing a load of laundry

USING THE CONTROL PANEL

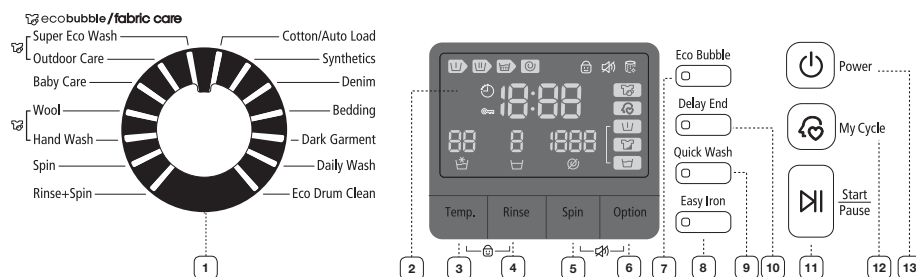

1 CYCLE SELECTOR

Select the tumble pattern and spin speed for the cycle.

 For detailed information, refer to “Washing clothes using the cycle selector”. (see page 28)

Cotton/Auto Load - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

Synthetics - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

Denim - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing.

Bedding - For bed spread, bed sheet, Bedding cover etc.

 Wash under 2.5 kg and only 1 kind of Bedding to achieve the best result.

Dark Garment - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly.

Daily Wash - Use for everyday items such as underwear and shirts.

Eco Drum Clean - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.

Super Eco Wash - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving.

Outdoor Care - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber.

Baby Care - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes.

Wool - Only for machine-washable wool. A load should be less than 2.0 kg.

- The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem.
- Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.

Hand Wash - A very light wash cycle as gentle as a hand wash.

Spin - Performs an additional spin cycle to remove more water.

Rinse + Spin - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.

2	DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
3	TEMP SELECTION BUTTON	Press this button repeatedly to cycle through the available water temperature options: (Cold Water  , 20 °C, 30 °C, 40 °C , 60 °C and 95 °C).
4	RINSE SELECTION BUTTON	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
5	SPIN SELECTION BUTTON	Press the button repeatedly to cycle through the available speeds for the spin cycle.
		<table><tr><td>P149SIH F14SIH / F14SWH</td><td>, , 400, 800, 1200, 1400 rpm</td></tr></table> “No spin ” - The laundry remains in the drum and no spin cycle is performed after the final drain. “Rinse Hold ” - The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
P149SIH F14SIH / F14SWH	 ,  , 400, 800, 1200, 1400 rpm	
6	OPTION SELECTION BUTTON	Press this button repeatedly to cycle through the options: Soak → Intensive → Prewash → Soak + Intensive → Soak + Prewash → Intensive + Prewash → Soak + Intensive + Prewash → off “Prewash”: Press this button to select pre-wash. Pre-wash is only available with: Cotton/Auto Load, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby Care. “Soak”: Use this option to effectively remove stains from your laundry by soaking your laundry. • The Soak function is performed 13 minutes into the wash cycle. • The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. • The Soak function is only available for the following wash programs: Cotton/Auto Load, Synthetics, Denim, Bedding, Daily Wash, Super Eco Wash , Baby Care. “Intensive”: Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
7	ECO BUBBLE SELECTION BUTTON	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).
8	EASY IRON SELECTION BUTTON	Press this button to prepare your laundry so that it can be easily ironed by reducing the wrinkles during the spin cycle. • Easy Iron is only available for the following wash programs: Cotton/Auto Load, Synthetics, Denim, Bedding, Dark garment, Daily wash, Super Eco Wash, Baby Care • When Easy Iron is selected, you can set the spin cycle speed up to 800 rpm. (If you select Easy Iron with a spin cycle speed set to higher than 800 rpm, the spinning speed is automatically changed to 800 rpm.)

washing a load of laundry

9 QUICK WASH SELECTION BUTTON	For lightly soiled garments and less than 2 kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalanced load, fluctuation in the electricity supply and extra options selected. • Press this button repeatedly to choose cycle time: 15 min → 20 min → 30 min → 40 min → 50 min → 1 hr → Off  Powdered/Liquid detergent should be under 20 g (for 2 kg load) or detergent may remain on the clothes.
10 DELAY END SELECTION BUTTON	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
11 START/PAUSE SELECTION BUTTON	Press to pause and restart a cycle.
12 MY CYCLE SELECTION BUTTON	Choose your favorite cycle including temperature, spin, soil level, option, etc.
13 POWER BUTTON	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.


Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

- When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

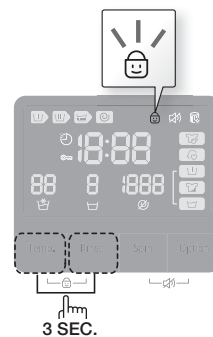


Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

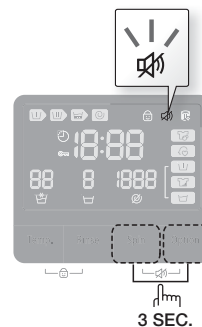

washing a load of laundry

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The “Delay End ⌚” indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.

By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The “My Cycle” light will indicate activation. Also, the chosen course and option lights will flicker.

You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
2. Press the **Power** button.
3. Select cycle using the **Cycle Selector**.
4. After cycle selection, set each option.



See the “Cycle Chart” on page 40 for available option settings with each cycle.

5. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.



You can change the My Cycle settings by repeating the same process above. The last used setting will be displayed the next time you choose the My Cycle function.



If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.



The bubble function is available in all courses except for Eco Drum Clean course and the function availability is as follows.

Course	Bubble function	Canceling the bubble function
Cotton/Auto Load, Synthetics, Denim, Bedding, Dark Garment, Daily Wash	Available	Available
Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash		Not available
Eco Drum Clean	Not available	-

- A different bubble function may be applied depending the course.



Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.


1. Open the door, place the laundry inside the wash tub and close the door.

2. Press the **Power** button.

3. Select a function.

4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.

- Add the appropriate amount of detergent into the detergent compartment ⑩, and add the fabric softener to softener compartment ⑪ just under the fiber softener base line (MAX) of "A".
- When the Prewash course is selected, add detergent into the prewash compartment ① as well.
- To use liquid detergent, leave the liquid detergent box in the drawer (refer to "Liquid Detergent" section on page 31).

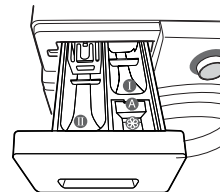

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.

- Press the **Start/Pause** button to start the wash.
- The amount of the laundry is automatically detected and the laundry is washed.
- Once a washing machine operation begins, you cannot add or select the bubble function.



- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.



Pre-wash is only available when selecting the Cotton/Auto Load, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby care cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton/Auto Load, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.



The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp** button to select the temperature. (Cold water, 20 °C, 30 °C, 40 °C, 60 °C, 95 °C)
8. Press the **Rinse** button to select the required number of rinse cycles.
The maximum number of rinse cycles is five.
The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed. (⊗ : No Spin)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

-  Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

washing a load of laundry

Determining the load capacity


Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity	
	F14SIH / F14SWH	P149SIH
Cotton/Auto Load	8.0 kg	9.0 kg
Synthetics	3.0 kg	3.5 kg
Denim	3.0 kg	3.0 kg
Bedding	2.0 kg	2.0 kg
Outdoor care	2.0 kg	2.0 kg
Wool	2.0 kg	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Bedding cover, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Bedding cover, the recommended load capacity is 2.5 kg or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

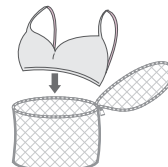

 Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines. Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

- Do not use detergent that has hardened or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

 Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.



2. Add the recommended amount of laundry detergent directly into the detergent compartment ⑪ before starting your washing machine.

 To use liquid detergent, use the liquid detergent box (refer to "Liquid Detergent" for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.

3. Add the recommended amount of fabric softener into the softener compartment ⑫ if required. DO NOT exceed the MAX FILL (A) line.

 Do NOT add any powder/liquid **detergent** to the softener compartment (⑫).

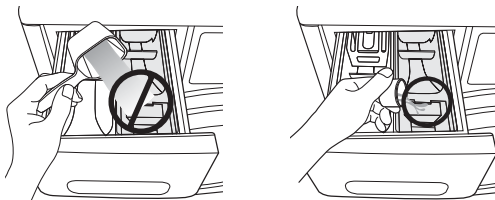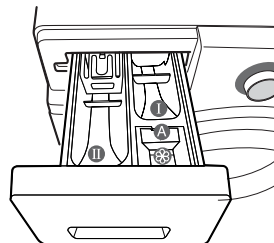


4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment ①.

 When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

 Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).


 Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

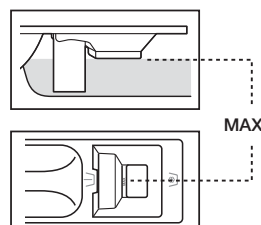

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

-  DO NOT fill above the MAX line.
-  When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

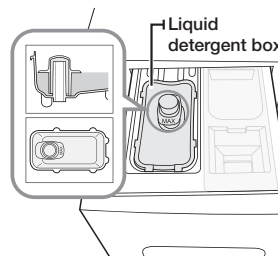


cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN


This course is a self-cleaning course that removes mold that may occur inside the washing machine.

1. Press the **Power** button.
2. Turn the **Cycle Selector** to the Eco Drum Clean course.
 - You can only use the Delay End function.
 - The water temperature during the Eco Drum Clean is set to 70 °C.

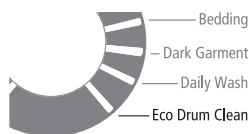

You cannot change the temperature.

3. Place the appropriate amount of cleansing agent into the detergent compartment ⑩ and close the detergent drawer (when cleaning the drum using a cleansing agent).
 - Be sure to use the recommended cleansing agent for cleaning the drum.
 - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

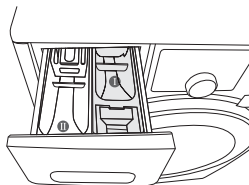


4. Press the **Start/Pause** button.
 - If you press the **Start/Pause** button, the Eco Drum Clean course begins.



- Using the Eco Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the Eco Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- **In the Eco Drum Clean course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].


The Eco Drum Clean Auto Alarm Function

- If the "Eco Drum Clean" indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the Eco Drum Clean course.
 - If you do not perform the Eco Drum Clean course, the "Eco Drum Clean" indicator on the display and the lamp on the Cycle Selector are turned off. However, the "Eco Drum Clean" indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
 - Although generally, the Eco Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.
-  **In case of the alarm, please also clean the debris filter (refer to "Cleaning the debris filter" section on page 34). Otherwise the performance of the bubble function may lower down.**

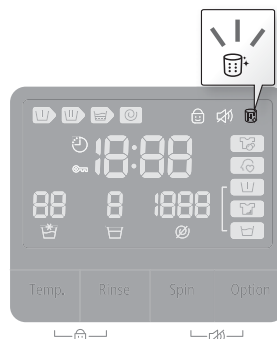


DRAINING THE WASHING MACHINE IN AN EMERGENCY


1. Unplug the washing machine from the power supply.
2. Open the filter cover by pressing down and pulling its handle.

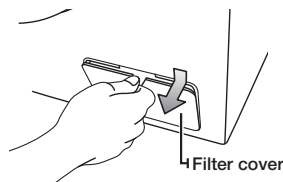

3. Open the emergency drain cap by pulling it.

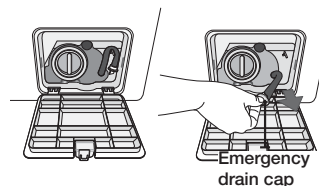

4. Hold the cap on the end of the emergency drain tube and slowly pull it out.
5. Allow all the water to flow into a bowl.
-  Remain water maybe more than you expected. Prepare larger bowl.
6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.

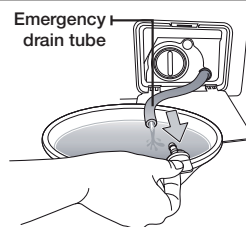

cleaning and maintaining your washing machine


CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of “5E” is displayed. (Refer to “Draining the washing machine in an emergency” in the previous section.) If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.




Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to “Draining the washing machine in an emergency” on page 33.)
 If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

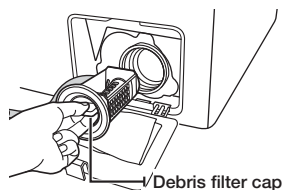

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

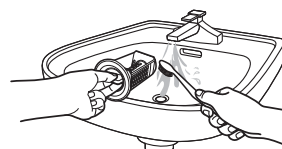

Do not open the debris filter cap while the machine is running or hot water may flow out.




- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR


1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS


1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

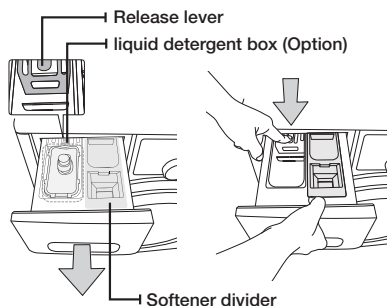

3. Wash all parts under running water.

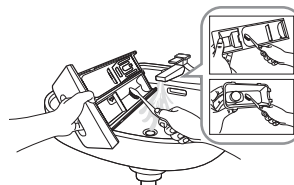

4. Clean the drawer recess with an old toothbrush.
5. Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

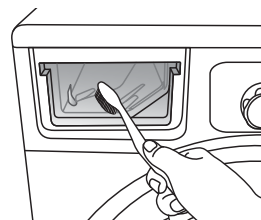

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the **Cotton/Auto Load** cycle and push the **Quick Wash** button and run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.



If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E/Uc	• Call the after-sales service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)		DETERGENT			Max Temp (°C)	Spin Speed (MAX) rpm
	F14SIH / F14SWH	P149SIH	Pre-wash	wash	Softener		
Cotton/Auto Load	8.0	9.0	Yes	●	●	95	1400
Synthetics	3.0	3.5	Yes	●	●	60	1200
Denim	3.0	3.0	Yes	●	●	60	800
Bedding	2.0	2.0	Yes	●	●	40	800
Dark Garment	4.0	4.0	Yes	●	●	40	1200
Daily Wash	4.0	4.0	Yes	●	●	60	1400
Eco Drum Clean	-	-	-	●	●	70	400
Super Eco Wash	4.0	4.0	Yes	●	●	40	1200
Outdoor Care	2.0	2.0	-	●	●	40	1200
Baby Care	4.0	4.0	Yes	●	●	95	1400
Wool	2.0	2.0	-	●	●	40	800
Hand Wash	2.0	2.0	-	●	●	40	400

PROGRAM	Eco Bubble	Delay end	Easy Iron	Intensive	Soak	Quick Wash	My Cycle
Cotton/Auto Load	●	●	●	●	●	●	●
Synthetics	●	●	●	●	●	-	●
Denim	●	●	●	●	●	-	●
Bedding	●	●	●	●	●	-	●
Dark Garment	●	●	●	●	-	-	●
Daily Wash	●	●	●	●	●	-	●
Eco Drum Clean	-	●	-	-	-	-	-
Super Eco Wash	●	●	●	●	●	-	●
Outdoor Care	●	●	-	-	-	-	●
Baby Care	●	●	●	●	●	-	●
Wool	●	●	-	-	-	-	●
Hand Wash	●	●	-	-	-	-	●

1. A cycle with a prewash takes approx. 17 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC60456/ EN60456.
Please run Calibration Mode after the installation (see page 20).
3. Cotton 40°C/60°C + intensive + Eco bubble are programs according to EN60456.
4. Daily Wash : Short program for test institutes.
5. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
6. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundry problems.

	Resistant material		Can be ironed at 100 °C max
	Delicate fabric		Do not iron
	Item may be washed at 95 °C		Can be dry cleaned using any solvent
	Item may be washed at 60 °C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 °C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 °C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 °C max		Tumble dry, reduced heat
	Can be ironed at 150 °C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
MODEL NAME			F14SIH / F14SWH	P149SIH
DIMENSIONS			W600xD600xH850(mm)	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			48 ℓ	54 ℓ
NET WEIGHT			65 kg	66 kg
WASH AND SPIN CAPACITY			8.0 kg	9.0 kg
POWER CONSUMPTION	WASHING	220 V	150 W	
		240 V	150 W	
	WASH AND HEATING	220 V	2000 W	
		240 V	2400 W	
	SPIN	230 V	350 W	
	PUMPING		34 W	
SPIN REVOLUTIONS		rpm	1400	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

memo

memo



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
IRAN	021-8255	www.samsung.com

Code No. DC68-03147M-03_EN

P149SIH
F14SIH
F14SWH



ماشین لباسشویی

راهنمای استفاده کننده

امکانات را تصور کنید

از اینکه این محصول Samsung را خریداری کردید متشکریم.
برای دریافت خدمات کامل تر، لطفاً محصول خود را در این آدرس ثبت
کنید

www.samsung.com/register



شماره کُد DC68-03147M-03_FA

ویژگی های ماشین لباسشویی samsung جدید شما

ماشین لباسشویی جدید شما روشی که لباسشویی می کنید را تغییر خواهد داد. از عملکرد اختصاصی Eco Bubble گرفته تا صرفه جویی در مصرف برق. ماشین لباسشویی Samsung جدید شما همه مزایایی که لباسشویی را تا حد امکان آسان و خوش آیند می کند. دارد.

- **صرفه جویی در مصرف برق**
این مدل صرفه جویی بیشتری در مصرف برق در مقایسه با ماشین لباسشویی نرخ A استاندارد به همراه سیستم ویژه تولید حباب و موتور عوض کننده Samsung را عرضه می کند.
- **شستشوی Eco Bubble (حباب مقرون به صرفه)**
سیستم حباب مقرون به صرفه موتور Samsung میزان تمیزی بهبود یافته را به همراه مراقبت پیشرفته از پارچه عرضه می کند. سیستم حباب مقرون به صرفه به ماده شوینده امکان می دهد تا به طور یک دست توزیع شده و سریع تر و عمیق تر به پارچه ها نفوذ کند.
- **سروصدا و لرزش کمتر**
این ماشین لباسشویی Samsung با استفاده از فناوری کنترل هوشمند. بسیار ساکت عمل کرده و سروصدا را به حداقل می رساند که به آن امکان میدهد لرزش را در پایین ترین حد ممکن نگه دارد. بنابراین نشت توازن کامل را حفظ می کند.
- **شستشوی سریع**
وقتی برای هدر دادن نیست! برنامه شستشوی سریع می تواند به زندگی پرمشغله شما کمک کند - اکنون می توانید پوشاک مورد علاقه تان (تا حداکثر ۲ کیلوگرم) را در ظرف ۱۵ دقیقه بشوید!
- **تمیز کردن مقرون به صرفه دیگ**
استفاده از تمیز کردن مقرون به صرفه دیگ حتی بدون استفاده از شوینده شیمیایی یا ماده سفید کننده به تمیز نگه داشتن ماشین لباسشویی کمک می کند. نشت را با استفاده از برنامه تمیز کننده تخصصی تمیز و بی بو نگه دارید.
- **مراقبت از کودک**
ماشین لباسشویی Samsung شما مجهز به برنامه های شستشو برای محافظت از لباس های کودکانی است که پوست حساس دارند. این برنامه ها آزرگی پوستی کودکان را در نتیجه باقیمانده های ماده لباسشویی کاهش می دهند. علاوه بر این برنامه ها لباس ها را به چندین نوع طبقه بندی کرده و شستشو براساس خصوصیات لباس ها انجام شده که در نتیجه هریار که پوشیده شوند. احساس تمیزی می کنند.
- **شستشو با دست**
مراقبت ویژه را می توان توسط دمای مناسب. عملکرد شستشوی ملایم و مقدار مناسب آب تعیین کرد.

• تأخیر در خاتمه

یک چرخه را برای حداکثر ۱۹ ساعت به فواصل یک ساعته به تأخیر انداخته و سهولت استفاده از ماشین لباسشویی را افزایش می دهد. مخصوصاً هنگامیکه خانه را ترک می کنید.

• قفل کودک

عملکرد قفل کودک تضمین می کند که دست های کوچک کنجکاوانه از ماشین لباسشویی شما دور نگه داشته شوند. این ویژگی ایمنی از بازی کردن فرزندان شما با ماشین لباسشویی در حین کار جلوگیری کرده و در صورت فعال شدن به شما هشدار می دهد.

• نمایشگر دیجیتال گرافیک

صفحه کنترل نمایشگر دیجیتال گرافیک بسیار واضح بوده و استفاده از آن آسان است تا در دسر و گرفتاری به حداقل ممکن برسد. و با اینکه استفاده از آن آسان است. نمایشگر دیجیتال گرافیک به شما امکان می دهد برای دستیابی به نتایج شستشوی ایده آل. تنظیمات سریع و دقیق را برای شستشو انجام دهید.

این دفترچه راهنما حاوی اطلاعات مهمی در مورد نصب، استفاده و مراقبت از ماشین لباسشویی Samsung جدید شماست. برای جزئیات صفحه کنترل، دستورالعمل های مربوط به استفاده از ماشین لباسشویی و راهنمایی های مربوط به استفاده هرچه بهتر از ویژگی ها و عملکردهای پیشرفته آن، به این دفترچه راهنما مراجعه کنید. بخش "رفع مشکلات و کدهای اطلاعاتی" در صفحه ۲۷ به آگاهی شما می رساند که در صورتیکه ماشین لباسشویی جدیدتان اشکالی پیدا کرد، چکار کنید.

اطلاعات ایمنی

ماشین لباسشویی Samsung جدید را به شما تبریک می گوئیم. این دفترچه راهنما حاوی اطلاعات مهمی در مورد نصب، استفاده و مراقبت از ماشین لباسشویی شماست. لطفاً برای مطالعه این دفترچه راهنما وقت صرف کنید تا از مزایا و ویژگی های بسیار زیاد ماشین لباسشویی تان کاملاً بهره مند شوید.

در مورد دستورات ایمنی به چه اطلاعاتی نیاز دارید

لطفاً این دفترچه راهنما را به طور کامل مطالعه کنید تا مطمئن شوید که با نحوه استفاده ایمن و پربازده از ویژگی ها و عملکردهای ماشین جدیدتان آشنا شده و آنرا برای مراجعه در آینده، در یک محل امن در نزدیکی ماشین نگه دارید. از این ماشین صرفاً به منظوری که در این دفترچه راهنما توصیف شده استفاده کنید.

هشدارها و دستورات ایمنی مهم در این دفترچه راهنما همه شرایط و موقعیت هایی که ممکن است اتفاق بیافتند را پوشش نمی دهند. شما مسئول هستید که در هنگام نصب، نگه داری و استفاده از ماشین لباسشویی، قضاوت صحیح، احتیاط و مراقبت را مد نظر داشته باشید. چون دستورات استفاده زیر مربوط به مدل های گوناگون می شوند. خصوصیات ماشین لباسشویی شما ممکن است قدری با ویژگی هایی که در این دفترچه راهنما توضیح داده شده متفاوت باشند و ممکن است همه علائم هشدار اطلاق پذیر نباشند. اگر سوال یا دغدغه ای دارید، با نزدیک ترین مرکز تعمیراتی خود تماس گرفته یا راهنمایی و اطلاعات آنلاین را در www.samsung.com پیدا کنید.

علائم و احتیاط های ایمنی مهم

نماد ها و علائم در این دفترچه راهنمای استفاده کننده چه معنی می دهند:

	خطرات ویا روال های خطرناک که ممکن است موجب صدمه شخصی شدید، مرگ و/یا خسارت مالی شوند.	هشدار
	خطرات ویا عملکردهای غیرایمن که ممکن است موجب صدمه شخصی و/یا خسارت مالی شوند.	احتیاط
	برای کاهش خطر آتشسوزی، انفجار، برق گرفتگی ویا صدمه شخصی در هنگام استفاده از ماشین لباسشویی، از این احتیاط های ایمنی ساده پیروی کنید:	احتیاط
	این کار را نکنید.	
	اوراق نکنید.	
	دست نزنید.	
	از دستورالعمل ها به طور صریح پیروی کنید.	
	دوشاخه را از پریز برق بیرون بکشید.	
	برای جلوگیری از برق گرفتگی مطمئن شوید که ماشین گرانند (زمینی) شده باشد.	
	برای دریافت راهنمایی با مرکز تعمیرات تماس بگیرید.	
	تذکر	

این علائم هشدار برای جلوگیری از آسیب وارد شدن به شما و دیگران در اینجا آمده اند. لطفاً اکیداً از آنها پیروی کنید.

پس از مطالعه این بخش، آنرا برای مراجعه در آینده در یک محل امن نگه دارید.

☆ همه دستورالعمل ها را قبل از استفاده از دستگاه مطالعه کنید.

مثل هر دستگاه دیگری که از برق و قطعات متحرک استفاده می کند، احتمال خطر وجود دارد. برای استفاده بی خطر از این دستگاه، با طرز استفاده آن آشنا شده و در هنگام استفاده مراقب باشید.

نگذارید کودکان (یا حیوانات خانگی) در داخل ویا روی ماشین لباسشویی بازی کنند. دریچه ماشین لباسشویی به آسانی از داخل باز نمی شود و اگر کودکان در آن گیر کنند ممکن است به طور جدی آسیب ببینند.

کودکان به سن ۸ سال به بالا و اشخاصی که معلولیت های جسمانی،  هشدار حسی و روانی دارند یا از تجربه و دانش کافی برخوردار نیستند در صورتی می توانند از این ماشین استفاده کنند که نظارت و دستورات لازم را در رابطه با استفاده ایمن از این ماشین دریافت کرده و از خطرات مربوطه آگاه باشند. کودکان نباید با این ماشین بازی کنند. تمیز کردن و حفظ و نگهداری توسط استفاده کننده بدون نظارت کافی توسط کودکان انجام نخواهد شد.

کودکان بایستی سرپرستی شوند تا اطمینان حاصل شود که با دستگاه بازی نمی کنند.

اگر دوشاخه (سیم جریان برق) صدمه دیده، بایستی توسط سازنده ویا تعمیرکار ویا شخص مجرب مشابه دیگری تعویض شود تا از خطرات جلوگیری شود.

این دستگاه بایستی طوری قرار گیرد که دسترسی به پریز برق، شیر آب و لوله های تخلیه آسان باشد.

برای ماشین های لباسشویی که روزنه هواکش آنها در زیر است، مطمئن شوید که روزنه توسط فرش ویا موانع دیگر مسدود نشده باشد.

از شیلنگ های جدید استفاده کنید و از شیلنگ های قدیمی نبایستی دوباره استفاده شود.

اطلاعات ایمنی



علائم هشدار جدی برای نصب



- نصب این ماشین بایستی توسط یک تکنیسین مجرب یا شرکت خدماتی انجام شود.
- قصور در چنین کاری ممکن است موجب برق گرفتگی، آتشسوزی، انفجار، مشکلاتی برای محصول یا مصدومیت شود.
- این ماشین سنگین است، هنگام بلند کردن آن مراقب باشید
- سیم برق را به پریز ۲۴۰ تا ۲۴۰ ولت برق متناوب / ۵۰ هرتز یا قوی تر زده و از پریز فقط برای این ماشین استفاده کنید. همچنین از سیم رابط استفاده نکنید.
- استفاده همزمان از یک پریز یا دستگاه های دیگر با استفاده از یک نوار برقی ویا امتداد دادن سیم برق ممکن است منجر به برق گرفتگی یا آتشسوزی شود.
 - مطمئن شوید که ولتاژ برق، فرکانس و جریان برق با مشخصات محصول یکسان باشند. قصور در انجام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود. دوشاخه را به طور محکم به پریز بزنید.
- همه مواد خارجی از قبیل گردوغبار یا آب را با استفاده از یک پارچه خشک به طور مرتب از خاها و نقاط تماس دوشاخه پاک کنید.
- دوشاخه را از پریز کشیده و آنرا با یک پارچه خشک تمیز کنید.
 - قصور در انجام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.
- دوشاخه را در جهت صحیح به پریز زده به طوریکه سیم به سمت کف اتاق باشد.
- اگر دوشاخه را در جهت مخالف به پریز بزنید، سیم های برق در داخل کابل ممکن است صدمه دیده و این موضوع ممکن است منجر به برق گرفتگی یا آتشسوزی شود.
- همه مواد بسته بندی را از دسترس کودکان دور نگه دارید چون مواد بسته بندی ممکن است برای کودکان خطرناک باشند.
- اگر یک کودک کیسه ای را روی سرش بکشد، ممکن است منجر به خفگی شود.
- هنگامیکه ماشین یا دوشاخه یا سیم برق آسیب دیده، با نزدیک ترین مرکز تعمیراتی خود تماس بگیرید.



- این ماشین بایستی به طور صحیح ارت شود.
- ماشین را با وصل کردن به لوله گاز، لوله پلاستیکی آب یا خط تلفن ارت نکنید.
- چنین کاری ممکن است منجر به برق گرفتگی، آتشسوزی، انفجار یا مشکلاتی برای محصول شود.
 - هرگز سیم برق را به پریزی نزنید که به طور صحیح زمینی نشده و مطمئن شوید که اینکار برطبق قوانین محلی و ملی انجام شده باشد.



- این ماشین را نزدیک یک بخاری یا مواد قابل اشتعال نصب نکنید.
- این ماشین را در یک محل مرطوب، چرب یا گردگرفته، در محلی که در معرض نور خورشید و آب (قطرات باران) است نصب نکنید.
- این ماشین را در محلی که دمای آن کم است نصب نکنید.
- یخ زدگی ممکن است منجر به ترکیدن لوله ها شود.
- این دستگاه را در محلی که گاز ممکن است نشت کند نصب نکنید.
- چنین کاری ممکن است موجب آتشسوزی یا برق گرفتگی شود.
- از یک ترانسفورماتور برقی استفاده نکنید.
- چنین کاری ممکن است موجب آتشسوزی یا برق گرفتگی شود.
- از دوشاخه آسیب دیده، سیم برق آسیب دیده یا پریز شل شده استفاده نکنید.
- چنین کاری ممکن است موجب آتشسوزی یا برق گرفتگی شود.

- سیم برق را نکشید یا زیادی خم نکنید.
- سیم برق را نیچانید یا گره نزنید.
- سیم برق را به یک شیئی فلزی قلاب نکنید. اشیاء سنگین را روی سیم برق نگذارید یا سیم برق را در فضای پشت ماشین فشرده نکنید.
- چنین کاری ممکن است موجب آتشسوزی یا برق گرفتگی شود.
- سیم برق را در هنگام بیرون کشیدن دوشاخه نکشید.
- دوشاخه را در حالیکه آنرا گرفته اید از پریز بیرون بکشید.
- قصور در انجام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.
- سیم برق یا لوله ها را طوری قرار ندهید که امکان افتادن روی آنها وجود داشته باشد.

علائم احتیاط برای نصب



- این ماشین بایستی طوری قرار داده شود که پریز برق قابل دسترسی باشد.
- قصور در انجام اینکار ممکن است به خاطر نشستن برق منجر به برق گرفتگی یا آتشسوزی شود.
- ماشین را بر روی یک سطح صاف و سخت نصب کنید که توانایی تحمل وزن آنرا داشته باشد.
- قصور در انجام چنین کاری ممکن است موجب لرزش، تکان خوردن، سروصدا و مشکلات غیرعادی برای محصول شود.

علائم هشدار جدی در هنگام استفاده



- اگر ماشین پر از آب شود، جریان آب و برق را فوراً قطع کرده و با نزدیک ترین مرکز تعمیراتی خود تماس بگیرید.
- با دست های خیس به دوشاخه دست نزنید.
- قصور در انجام اینکار ممکن است منجر به برق گرفتگی شود.
- اگر ماشین صداهای عجیب، بوی سوختگی یا دود ایجاد می کند، دوشاخه را فوراً کشیده و با نزدیک ترین مرکز تعمیراتی خود تماس بگیرید.
- قصور در انجام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.
- در مواردی که گاز نشستن می کند (از قبیل گاز پروپان، گاز LP و غیره)، فوراً بدون دست زدن به دوشاخه هواگیری کنید. به ماشین یا سیم برق دست نزنید.
- از پنکه برای هواگیری استفاده نکنید.
- یک چرکه ممکن است موجب انفجار یا آتشسوزی شود.
- به کودکان اجازه ندهید که بر روی ماشین لباسشویی یا داخل آن بازی کنند، علاوه براین، هنگامیکه ماشین را به دور می اندازید، دسته درجه ماشین لباسشویی را جدا کنید.
- کودکان در صورت حبس شدن در داخل ماشین، ممکن است گیر افتاده و در اثر خفگی تلف شوند.
- مطمئن شوید که مواد بسته بندی (اسفنج، یونولیت) که به زیر ماشین لباسشویی چسبانده شده را قبل از استفاده جدا کنید.

اطلاعات ایمنی



افلامی که به بنزین، نفت چراغ، بنزن، تینر رنگ، الکل یا مواد قابل اشتعال یا منفجره دیگر آغشته شده اند را نشویید.

- چنین کاری ممکن است موجب آتشسوزی، برق گرفتگی یا انفجار شود.

هنگامیکه ماشین لباسشویی در حال کار است (شستشو/خشک کردن/گردش با دمای زیاد)، دریچه آنرا با فشار باز نکنید

- آبی که از ماشین لباسشویی به بیرون جریان پیدا می کند ممکن است منجر به سوختگی شده یا موجب لیز شدن کف اتاق نشود.

اینکار ممکن است منجر به مصدومیت شود.

- باز کردن دریچه توسط اعمال فشار ممکن است منجر به آسیب به محصول یا مصدومیت شود.

دست خود را زیر ماشین لباسشویی نکنید.

- اینکار ممکن است منجر به مصدومیت شود.

با دست های خیس به دوشاخه دست نزنید.

- اینکار ممکن است منجر به برق گرفتگی شود.

ماشین را هنگامیکه کار می کند توسط کشیدن دوشاخه از پریز خاموش نکنید.

- زدن دوباره دوشاخه به پریز ممکن است موجب جرقه شده و منجر به برق گرفتگی یا آتشسوزی شود.

به کودکان یا اشخاص معلول اجازه ندهید که بدون نظارت شما از این ماشین لباسشویی استفاده کنند. به کودکان اجازه ندهید که از این ماشین بالا بروند.

- قصور در انجام اینکار ممکن است منجر به برق گرفتگی، سوختگی یا مصدومیت شود.

دست هایتان را یک شی فلزی را در حالیکه ماشین لباسشویی کار می کند به زیر آن وارد نکنید.

- اینکار ممکن است منجر به مصدومیت شود.

دوشاخه ماشین را با کشیدن سیم برق از پریز بیرون نکشید. همیشه دوشاخه را محکم گرفته و آنرا مستقیم از پریز بیرون بکشید.

- صدمه به سیم برق ممکن است منجر به اتصالی، آتشسوزی و/یا برق گرفتگی شود.



سعی نکنید که دستگاه را خودتان تعمیر یا اوراق کرده یا در آن تغییراتی ایجاد کنید.

- از هرگونه فیوز (از قبیل کوپر، سیم فولادی و غیره) به غیر از فیوز استاندارد استفاده نکنید.

- هنگامیکه لازم است ماشین تعمیر یا دوباره نصب شود، با نزدیکترین مرکز تعمیراتی خود تماس بگیرید.

- قصور در چنین کاری ممکن است موجب برق گرفتگی، آتشسوزی، مشکلاتی برای محصول یا مصدومیت شود.



اگر شیلنگ جریان آب از شیر آب شل شده و ماشین را پر از آب می کند، دوشاخه را بیرون بکشید.

- قصور در انجام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.

هنگامیکه برای مدت طولانی از ماشین استفاده نمی شود ویا در طول رعد و برق، دوشاخه را بیرون بکشید.

- قصور در انجام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.



علائم احتیاط برای استفاده



- هنگامیکه ماشین لباسشویی به مواد خارجی از قبیل ماده شوینده، کثافات، ذرات غذا و غیره آغشته شده، دوشاخه را بیرون کشیده و ماشین لباسشویی را با استفاده از یک پارچه نم دار نرم تمیز کنید.
- قصور در انجام اینکار ممکن است منجر به رنگ رفتگی، تغییر شکل، آسیب یا زنگ زدگی شود.
- ضربه شدید ممکن است شیشه جلوی ماشین را بشکند. هنگام استفاده از ماشین لباسشویی مراقب باشید.
- شکسته شدن شیشه، ممکن است منجر به مصدومیت شود.
- پس از قطع شدن جریان آب یا هنگام وصل کردن مجدد شیلنگ جریان آب، شیر آب را به آهستگی باز کنید.
- پس از اینکه برای مدت طولانی از ماشین استفاده نکردید، شیر آب را به آهستگی باز کنید.
- فشار هوا در شیلنگ جریان آب یا لوله آب ممکن است منجر به آسیب به یکی از قطعات ماشین یا نشت آب شود.
- در صورت بروز خطای تخلیه در حین کار کردن، مشکلات تخلیه را کنترل کنید.
- اگر به خاطر بروز اشکال در تخلیه از ماشین لباسشویی که پر از آب است استفاده نشود، ممکن است نشت برق موجب برق گرفتگی یا آتشسوزی شود.
- لباس ها را کاملاً به ماشین لباسشویی وارد کنید تا لباس ها به درجه گیر نکنند.
- اگر لباس ها به درجه گیر کنند، ممکن است موجب آسیب به لباس ها یا ماشین لباسشویی شده، یا موجب نشت آب شود.
- مطمئن شوید که شیر آب در هنگامیکه از ماشین لباسشویی استفاده نمی شود بسته باشد.
- مطمئن شوید که پیچ روی اتصالی شیلنگ جریان آب درست سفت شده باشد.
 - قصور در انجام اینکار ممکن است منجر به آسیب به اموال یا مصدومیت شود.
- مراقب باشید که لاستیک دور درجه و شیشه درجه در جلو توسط مواد خارجی (از قبیل زباله، ریسمان، مو و غیره) آلوده نشده باشد.
- اگر مواد خارجی در درجه گیر کنند یا درجه به طور کامل بسته نشود، ممکن است موجب نشت آب شود.
- شیر آب را باز کرده و کنترل کنید که اتصالی شیلنگ جریان آب درست محکم شده باشد و قبل از استفاده، آبی از محصول نشت نمی کند.
- اگر پیچ ها یا اتصالی شیلنگ جریان آب شل شده باشند، ممکن است منجر به نشت آب شود.
- محصولی که خریداری کردید فقط برای استفاده خانگی طراحی شده است.
- استفاده از آن به منظور جاری سوء استفاده از محصول تلقی می شود. در این صورت محصول تحت پوشش گارانتی استاندارد است که توسط Samsung ارائه شده نمی باشد و برای درست کار نکردن یا آسیب هایی که در نتیجه چنین سوء استفاده ای باشد مسئولیتی به Samsung نسبت داده نمی شود.

اطلاعات ایمنی

بر روی ماشین نایستید یا اشیائی را بر روی آن نگذارید (از قبیل لباس، شمع روشن، سیگار روشن، ظروف، مواد شیمیایی و فلزی و غیره).

- چنین کاری ممکن است منجر به برق گرفتگی، آتشسوزی، مشکلاتی برای محصول یا مصدومیت شود.
- مواد قرار از قبیل حشره کش ها را روی سطح ماشین اسپری نکنید.
- اینکار علاوه براینکه برای انسان مضر است، ممکن است منجر به برق گرفتگی، آتشسوزی یا مشکلاتی برای محصول شود.
- اشیائی که میدان الکترومغناطیسی تولید می کنند را در نزدیکی ماشین لباسشویی قرار ندهید.
- اینکار ممکن است منجر به مصدومیت به خاطر درست کار نکردن شود.
- چون آب تخلیه شده در حین شستشو با دمای زیاد یا چرخه خشک کردن داغ است، به آب دست نزنید.
- اینکار ممکن است منجر به سوختگی یا مصدومیت شود.
- تنگ روی صندلی، کفش یا لباس ضد آب (*) را نشوید، گردش ندهید یا خشک نکنید. مگر اینکه ماشین شما برنامه خاصی برای شستشوی این اقلام داشته باشد.
- کفش های ضخیم و سفت را نشوید حتی اگر علامت ماشین لباسشویی روی برچسب مراقبت باشد.
- اینکار ممکن است به واسطه لرزش های غیرعادی منجر به مصدومیت یا آسیب به ماشین لباسشویی، دیوارها، کف اتاق یا لباس ها شود.
- * ملافه های پشمی، بارانی، لباس های ماهیگیری، شلوار اسکی، کیسه خواب، پوشش پوشک، پولیور و پوشش دوچرخه، موتورسیکلت، اتومبیل و غیره.
- هنگامیکه جعبه ماده شوینده از ماشین جدا شده از ماشین لباسشویی استفاده نکنید.
- اینکار ممکن است به واسطه نشت آب، منجر به برق گرفتگی یا مصدومیت شود.
- در حین خشک کردن یا درست بعد از آن به داخل نشت دست نزنید چون داغ است.
- اینکار ممکن است منجر به سوختگی شود.
- بعد از اینکه جعبه ماده شوینده را باز کردید دست تان را به داخل آن وارد نکنید.
- اینکار ممکن است منجر به مصدومیت شود چون دست شما ممکن است در وسیله ورودی شوینده گیر کند، به غیر از لباس ها هیچگونه شئی (از قبیل کفش، باقیمانده غذا، حیوانات) را در ماشین لباسشویی قرار ندهید.
- اینکار ممکن است منجر به آسیب وارد شدن به ماشین لباسشویی، یا در مورد حیوانات خانگی به واسطه لرزش های غیرعادی موجب مصدومیت یا مرگ آنها شود.
- دکمه ها را با استفاده از اشیاء تیز از قبیل سوزن، کارد، ناخن و غیره فشار ندهید.
- چنین کاری ممکن است منجر به برق گرفتگی یا مصدومیت شود.
- لباس هایی که آغشته به روغن، کرم یا لوسیونی که معمولاً در مغازه های مراقبت پوست یا کلینیک های ماساژ یافت می شوند را نشوید.
- اینکار ممکن است موجب ایجاد تغییر شکل در پلمپ لاستیکی و نشت آب شود.
- نگذارید اشیاء فلزی از قبیل سنجاق قفلی یا سنجاق سر یا ماده سفید کننده به مدت طولانی در نشت باقی بمانند.
- اینکار ممکن است منجر به زنگ زدگی نشت شود.
- اگر سطح نشت شروع به زنگ زدگی کرد، یک محلول (خنثی) تمیز کننده به سطح بمالید و از یک اسفنج برای تمیز کردن آن استفاده کنید. هرگز از یک برس فلزی استفاده نکنید.
- از ماده شوینده مستقیماً استفاده نکنید و لباس هایی که آغشته به ماده شوینده خشک هستند را نشوید. آبکشی نکنید یا گردش ندهید.
- اینکار ممکن است به واسطه گرمای اکسیده شدن روغن، منجر به اشتعال یا احتراق آتی شود.
- از آب گرم دستگاه های آب سردکن/ آبگرم کن استفاده نکنید.
- اینکار ممکن است منجر به مشکلاتی برای ماشین لباسشویی شود.

- از صابون طبیعی شستشوی دست برای ماشین لباسشویی استفاده نکنید.
- اگر این صابون سخت شده و در داخل ماشین لباسشویی جمع شود، ممکن است منجر به مشکلاتی برای محصول. رنگ رفتگی، زنگ زدگی یا بوی بد شود.

اقدام بزرگ از قبیل ملافه را در تور لباسشویی نشویید.

- جوراب و کرسست ها را در تور لباسشویی قرار داده و به همراه لباس های دیگر بشویید.
- قصور در انجام اینکار ممکن است به واسطه لرزش های غیرعادی منجر به آسیب شود.

از ماده شوینده سفت شده استفاده نکنید.

- در صورت جمع شدن در داخل ماشین لباسشویی، ممکن است منجر به نشت آب شود.

برای ماشین های لباسشویی که روزنه هواکش آنها در زیر است، مطمئن شوید که روزنه توسط فرش ویا موانع دیگر مسدود نشده باشد.

مطمئن شوید که جیب های همه لباس هایی که شسته می شوند خالی شده باشند.

- اشیاء سخت و تیز از قبیل سکه، سنجاق قفلی، میخ، پیچ ویا سنگ ممکن است به این دستگاه آسیب جدی وارد کنند.

سعی نکنید لباس هایی که سنگ، دکمه بزرگ ویا فلزات سنگین دیگر دارند را بشویید.

علائم هشدار جدی در مورد تمیز کردن



هشدار

ماشین را توسط پاشیدن آب به طور مستقیم بر روی آن تمیز نکنید.

از مواد تمیز کننده ای که حاوی اسید قوی هستند استفاده نکنید.

از بنزن، تینر یا الکل برای تمیز کردن ماشین استفاده نکنید.

- چنین کاری ممکن است منجر به رنگ رفتگی، تغییر شکل، آسیب، آتشسوزی یا برق گرفتگی شود.

قبل از تمیز کردن یا انجام عملیات حفظ و نگهداری، ماشین را از پریز بکشید.

- قصور در انجام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.

فهرست مطالب

راه اندازی ماشین لباسشویی

۱۳

کنترل قطعات	۱۳
مراعات ضوابط نصب	۱۴
جریان برق و گرانند کردن	۱۴
جریان آب	۱۴
تخلیه	۱۵
کف اتاق	۱۵
دمای محیط اطراف	۱۵
نصب در محل تنگ ویا کمد	۱۵
نصب ماشین لباسشویی	۱۵

شستشوی مقداری لباس

۲۱

شستشو برای بار اول	۲۱
دستورات اولیه	۲۱
استفاده از صفحه کنترل	۲۲
Child Lock (قفل کودک)	۲۵
Sound Off (صدا خاموش)	۲۵
Delay End (تأخیر در خاتمه)	۲۶
My Cycle (چرخه شستشوی من)	۲۶
Eco Bubble (حباب مقرون به صرفه)	۲۷
شستشوی لباس ها با استفاده از گزینشگر چرخه شستشو	۲۸
شستشوی لباس ها به طور دستی	۲۹
رهنمودهای لباسشویی	۲۹
اطلاعات در مورد شوینده و مواد افزودنی	۳۰
از چه شوینده ای استفاده شود	۳۰
کنشوی ماده شوینده	۳۱
مایع شوینده (مدل های برگزیده)	۳۱

تمیز کردن و مراقبت از ماشین لباسشویی

۳۲

Eco Drum Clean (تمیز کردن مقرون به صرفه تشنت)	۳۲
تخلیه ماشین لباسشویی در موقعیت اضطراری	۳۳
تمیز کردن فیلتر کثافات	۳۴
تمیز کردن سطح بیرونی	۳۴
تمیز کردن کنشوی و حفره کنشوی شوینده	۳۵
تمیز کردن فیلتر توری شیلنگ آب	۳۵
تعمیر یک ماشین لباسشویی یخ زده	۳۶
انبار کردن ماشین لباسشویی	۳۶

عیب یابی و کدهای اطلاعاتی

۳۷

در موارد زیر این نکات را کنترل کنید. ماشین لباسشویی...	۳۷
کدهای اطلاعاتی	۳۸

جدول چرخه شستشو

۳۹

جدول چرخه شستشو	۳۹
-----------------	----

ضمیمه

۴۰



جدول مراقبت از پارچه	۴۰
محافظت از محیط زیست	۴۰
اعلامیه سازگاری	۴۰
مشخصات	۴۱

راه اندازی ماشین لباسشویی

مطمئن شوید که متصدی نصب شما این دستورالعمل ها را به طور دقیق مراعات کند تا ماشین لباسشویی جدید شما به طور صحیح کار کرده و در حین انجام لباسشویی در معرض خطر جراحت قرار نگیرید.

کنترل قطعات

با احتیاط ماشین لباسشویی را از کارتن خارج کرده و مطمئن شوید که همه قطعاتی که در زیر نشان داده شده را دریافت کرده باشید. اگر ماشین لباسشویی در حین حمل و نقل آسیب دیده ویا اینکه همه قطعات را ندارید، با خدمات مشتریان Samsung ویا فروشنده Samsung خود تماس بگیرید.

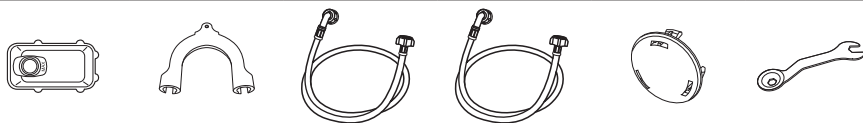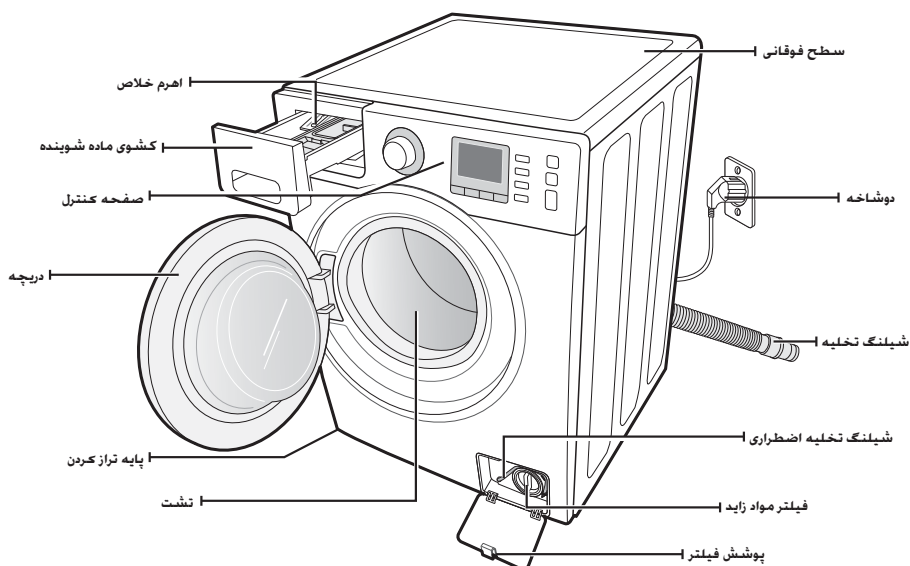

جعبه مایع شوینده
(مدل برگزیده)

هادی شیلنگ

داغ
(مدل برگزیده)

شیلنگ جریان آب

سرد

* سرپوش های
سوراخ پیچ

آچار

* سرپوش های سوراخ پیچ: تعداد سرپوش های سوراخ پیچ بستگی به مدل دارد (۳ تا ۵ سرپوش).

راه اندازی ماشین لباسشویی

مراعات ضوابط نصب

جریان برق و گراند کردن



هرگز از سیم رابط استفاده نکنید.
مشار فقط از سیم برقی استفاده کنید که به همراه ماشین لباسشویی ارائه شده است.

هنگام آماده شدن برای نصب، مطمئن شوید که جریان برق به این صورت باشد:

- فیوز یا مدارشکن ۲۴۰ تا ۲۴۰ ولت / ۵۰ هرتز
- مدار جداگانه فقط برای ماشین لباسشویی استفاده می شود

ماشین لباسشویی بایستی گراند شود. اگر ماشین لباسشویی درست کار نکند ویا خراب شود. گراند کردن توسط ایجاد یک مسیر کمتر مقاومت برای مدار برقی. خطر برق گرفتگی را کاهش خواهد داد.

ماشین لباسشویی به همراه سیم برقی عرضه می شود که یک سه شاخه گراند شده برای استفاده در پریز دارد که به طور صحیح نصب و گراند شده باشد.



هرگز سیم گراند را به لوله های پلاستیکی آب، لوله های گاز ویا لوله های آب گرم متصل نکنید.

اتصال نادرست هادی گراند دستگاه ممکن است موجب برق گرفتگی شود.

اگر مطمئن نیستید که ماشین لباسشویی به طور صحیح گراند شده، با یک تکنسین برق ویا تعمیرکار مشورت کنید. در دوشاخه ای که به همراه ماشین لباسشویی عرضه شده تغییری ایجاد نکنید. اگر در پریز جا نمی گیرد، ترتیب نصب یک پریز مناسب را با یک تکنسین برق مجرب بدهید.

جریان آب

ماشین لباسشویی زمانی درست پر می شود که فشار آب از ۵۰ تا ۸۰۰ کیلوپاسکال باشد. فشار آب کمتر از ۵۰ کیلوپاسکال ممکن است موجب از کار افتادگی دریچه آب شود که امکان بسته شدن کامل دریچه آب را نمی دهد. ویا ممکن است پر کردن ماشین لباسشویی بیشتر از آنچه کنترل ها اجازه می دهند طول بکشد که موجب خاموش شدن ماشین لباسشویی می شود. (محدوده زمانی پرکردن که برای جلوگیری از لبریززینادی پر شدن در صورت شل شدن یک شیلنگ داخلی طراحی شده، در کنترل ها تعبیه شده است.)

شیرهای آب بایستی به فاصله ۱۴۰ سانتی متر از عقب ماشین لباسشویی باشند تا شیلنگ های ورودی ارائه شده به ماشین لباسشویی برسند.



بیشتر فروشگاههای وسایل لوله کشی، شیلنگ ورودی به طول های مختلف را می فروشند که تا حداکثر ۳۰۵ سانتی متر درازا دارند.

می توانید به روش های زیر خطر نشت و آسیب توسط آب را کاهش دهید:

- شیرهای آب به آسانی قابل دسترسی باشند.
- بستن شیر آب هنگامیکه از ماشین لباسشویی استفاده نمی شود.
- کنترل دوره ای نشت در محل اتصال شیلنگ های ورودی آب.



قبل از استفاده از ماشین لباسشویی برای اولین بار، همه اتصالاتی های دریچه و شیرهای آب را برای نشت کنترل کنید.
مشار

تخلیه

Samsung توصیه می کند که از یک مخزن به بلندی ۶۵ سانتی متر استفاده شود. لوله تخلیه بایستی از طریق گیره لوله تخلیه به مخزن متصل شده باشد. مخزن بایستی به اندازه کافی بزرگ باشد که قطر خارجی شیلنگ تخلیه را بپذیرد. شیلنگ تخلیه در کارخانه متصل می شود.

کف اتاق

برای عملکرد بهتر، ماشین لباسشویی بایستی بر روی زمینی که به طور سفت و محکم احداث شده نصب شود. ممکن است لازم باشد که کف چوبی مستحکم شود تا میزان لرزش و/یا توده های لباس نامتوازن را به حداقل برساند. زمین مفروش و یا سطوحی که کاشی نرم دارند عواملی هستند که لرزش ایجاد کرده و موجب می شوند که ماشین لباسشویی در حین چرخه گردش قدری حرکت کند.

هرگز ماشین لباسشویی را بر روی یک سکو و یا سطحی که به خوبی مستحکم نشده نصب نکنید.

دمای محیط اطراف

ماشین لباسشویی را در محل هایی که ممکن است آب یخ بزند نصب نکنید چون ماشین لباسشویی همیشه مقداری آب را در درجه آب، پمپ و اطراف شیلنگ نگه می دارد. آب منجمد در لوله ها ممکن است به تسمه ها، پمپ و اجزاء دیگر آسیب برساند.

نصب در فضای محدود و یا کمد

ماشین لباسشویی برای کارکرد ایمن و صحیح، به این فواصل نیاز دارد:

پشت - ۵۰ میلی متر	دو طرف - ۲۵ میلی متر
جلو - ۴۴۵ میلی متر	بالا - ۲۵ میلی متر

اگر ماشین لباسشویی به همراه ماشین خشک کن نصب شود، جلوی محل نصب و یا کمد بایستی حداقل ۴۴۵ میلی متر فضای باز مسدود نشده داشته باشد. ماشین لباسشویی به تنهایی نیازی به فضای باز خاصی ندارد.

نصب ماشین لباسشویی

مرحله ۱

انتخاب یک محل



قبل از نصب ماشین لباسشویی، مطمئن شوید که محل:

- یک سطح محکم و هم تراز داشته باشد که فاقد فرش و یا سطوحی است که ممکن است هواگیری را مسدود کند
- به دور از نور مستقیم خورشید باشد
- به اندازه کافی هواگیری شود
- منجمد نخواهد شد (زیر ۰ درجه سانتی گراد)
- به دور از منابع گرما از قبیل بخاری نفتی یا گازی باشد
- به اندازه کافی فضای خالی دارد که ماشین لباسشویی بر روی سیم برقیش قرار نگیرد


راه اندازی ماشین لباسشویی

مرحله ۲


برداشتن پیچ های حمل و نقل

قبل از نصب ماشین لباسشویی، بایستی همه پیچ های حمل و نقل را از پشت ماشین بردارید.


۱. همه پیچ ها را با استفاده از آچار ارائه شده شل کنید.

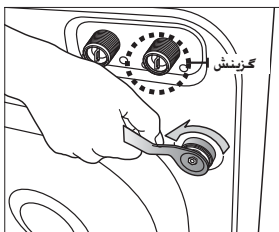

۲. پیچ را با آچار گرفته و آنرا از بخش عریض سوراخ به بیرون بکشید. این کار را برای هر پیچ تکرار کنید.

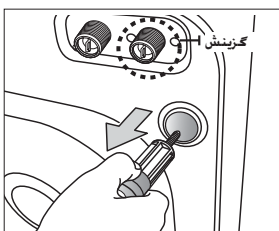

۳. سوراخ ها را با پوشش های پلاستیکی ارائه شده پر کنید.

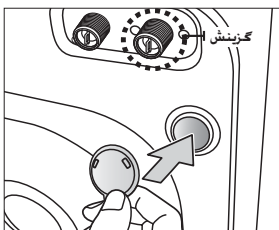


۴. پیچ های حمل و نقل را در یک محل امن نگه دارید. چنانچه خواستید ماشین لباسشویی را در آینده حرکت دهید.

⚠ مواد بسته بندی می توانند برای کودکان خطرناک باشند؛ همه مواد بسته بندی (کیسه های پلاستیکی، پلی استین و غیره) را مشتملاً از دسترس کودکان دور نگه دارید.


مرحله ۳

تنظیم پایه های تراز کردن

۱. هنگام نصب ماشین لباسشویی، مطمئن شوید که دوشاخه برق، جریان آب و تخلیه به راحتی قابل دسترسی باشند. ماشین لباسشویی را به سر جایش بلغزانید.

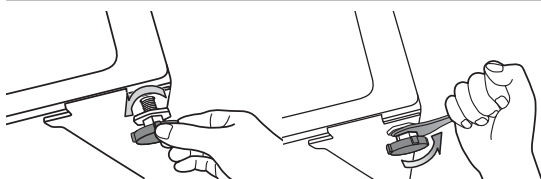

۲. ماشین لباسشویی را با گرداندن پایه تراز کردن یا دست به بیرون و داخل، به مقدار لازم هم تراز کنید.

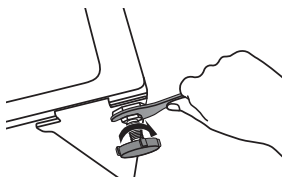


۳. هنگامیکه ماشین لباسشویی هم تراز شد، مهره را با استفاده از آچار که به همراه ماشین لباسشویی عرضه شده محکم کنید.

مرحله ۴

اتصال لوله آب و تخلیه

وصل کردن شیلنگ جریان آب

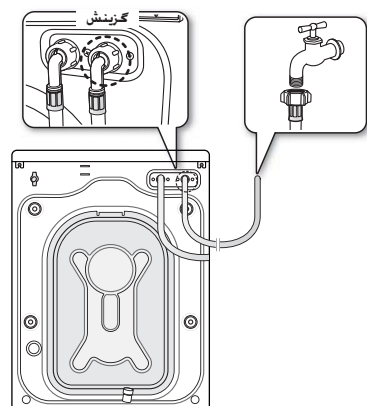

۱. قطعه به شکل A برای شیلنگ جریان آب سرد را گرفته و آنرا به ورودی جریان آب سرد در پشت ماشین متصل کنید. با دست محکم کنید.
۲. شیلنگ جریان آب بایستی از یک طرف به ماشین لباسشویی و از طرف دیگر به شیر آب متصل شود. شیلنگ جریان آب را نکشید. اگر شیلنگ آب زیادی کوتاه است، آنرا با لوله بلندتر و پرفشارتری تعویض کنید.
۳. انتهای دیگر شیلنگ جریان آب سرد را به شیر آب سرد ظرفشویی متصل کرده و با دست محکم کنید. در صورت لزوم، می توانید شیلنگ جریان آب را با شل کردن اتصالات در سمت ماشین لباسشویی، چرخاندن لوله و محکم کردن اتصالات سرچایش بگذارید.


برای مدل های مخصوصی که یک ورودی آب گرم اضافی دارند:

۱. قطعه به شکل A قرمز رنگ برای شیلنگ تأمین آب گرم را گرفته و آنرا به ورودی جریان آب گرم در پشت ماشین متصل کنید. با دست محکم کنید.
۲. سر دیگر شیلنگ جریان آب گرم را به شیر آب گرم ظرفشویی متصل کرده و با دست محکم کنید.
۳. اگر می خواهید فقط از آب سرد استفاده کنید از یک قطعه Y استفاده کنید.


راه اندازی ماشین لباسشویی

وصل کردن شیلنگ جریان آب


۱. آداپتور را از شیلنگ جریان آب جدا کنید.

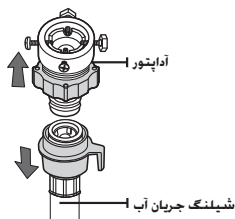

۲. ابتدا با استفاده از پیچ گوشه‌ای نوع *۴*، چهار پیچ روی آداپتور را شل کنید. سپس آداپتور را گرفته و قطعه (۱) را در جهت پیکان گردانده تا اینکه یک شکاف ۵ میلی متری به وجود بیاید.




۳. آداپتور را با محکم کردن پیچ‌ها به شیر آب متصل کنید. در حالیکه آداپتور را به سمت بالا می‌کشید. قطعه (۲) را در جهت پیکان گردانده و (۱) و (۲) را متصل کنید.

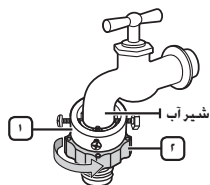



۴. شیلنگ جریان آب را به آداپتور وصل کنید. هنگامیکه قطعه (۳) را رها می‌کنید. شیلنگ به طور خودکار به آداپتور وصل شده و صدای "کلیک" می‌کند.

پس از اتصال شیلنگ جریان آب به آداپتور، با کشیدن شیلنگ جریان آب به سمت پایین، مطمئن شوید که به طور صحیح متصل شده باشد.

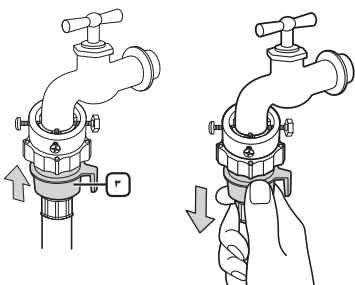


۵. انتهای دیگر لوله جریان آب را به سربیش منبع آب در پشت ماشین لباسشویی متصل کنید. شیلنگ را تا آخر به داخل در جهت عقربه ساعت پیچ کنید.

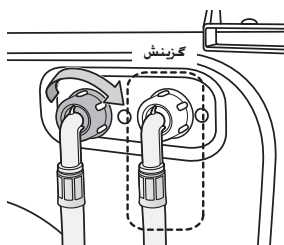

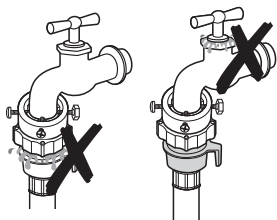

۶. جریان آب را باز کنید و مطمئن شوید که آب از سرپیچ، شیر ویا آداپتور نشت نمی کند. اگر آب نشت می کند، مراحل قبلی را تکرار کنید.

اگر آب نشت می کند از ماشین لباسشویی استفاده نکنید. چنین کاری ممکن هشدار است موجب برق گرفتگی ویا جراحت شود.

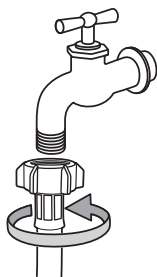


• اگر شیر آب از نوع پیچی است، شیلنگ جریان آب را به طوری که نشان داده شده به شیر متصل کنید.

از نوع شیری که بیشتر برای جریان آب معمول است استفاده کنید. در صورتیکه شیر چهارگوش بوده ویا زیادی بزرگ است. واشر را قبل از وارد کردن شیر به داخل آداپتور خارج کنید.



اتصال شیلنگ Aqua (مدل های برگزیده)

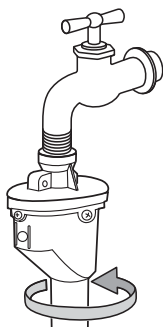

شیلنگ Aqua برای محافظت ایده آل در مقابل نشت آب اختراع شده است. این وسیله به شیلنگ جریان آب متصل شده و در صورت آسیب وارد شدن به شیلنگ، جریان آب را به طور خودکار قطع می کند. همچنین یک نشانگر هشدار را نمایش می دهد.


• شیلنگ جریان آب را به طوری که نشان داده شده به شیر آب وصل کنید.

راه اندازی ماشین لباسشویی

اتصال شیلنگ تخلیه

انتهای شیلنگ تخلیه را می توان به سه صورت قرار داد:


۱. بر روی لبه ظرفشویی: شیلنگ تخلیه بایستی به ارتفاع بین ۶۰ و ۹۰ سانتی متر قرار داده شود. برای کج نگه داشتن دهانه شیلنگ، از راهنمای لوله پلاستیکی که ارائه شده استفاده کنید. راهنما را به وسیله یک قلاب به دیوار و یا به وسیله یک قطعه ریسمان به شیر محکم کنید تا از حرکت شیلنگ تخلیه جلوگیری شود.
۲. در یک شاخه شیلنگ تخلیه ظرفشویی: شاخه شیلنگ تخلیه بایستی در بالای سیفون ظرفشویی قرار داده شود تا انتهای شیلنگ حداقل ۶۰ سانتی متر بالای سطح زمین باشد.

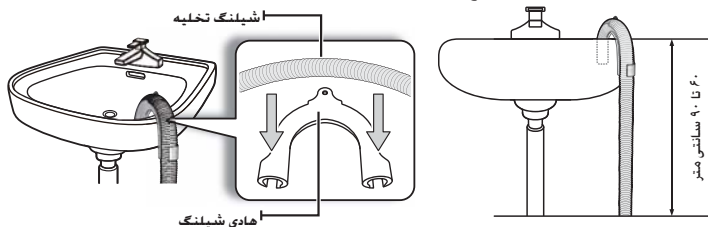

۳. در یک شیلنگ تخلیه: ما توصیه می کنیم که از یک لوله عمودی به درازای ۶۵ سانتی متر استفاده کنید: نبایستی کوتاه تر از ۶۰ سانتی متر و بلندتر از ۹۰ سانتی متر باشد.

لزومات لوله تخلیه مخزن:

- حداقل قطر ۵ سانتی متر.
- حداقل ظرفیت خروجی ۶۰ لیتر در دقیقه.

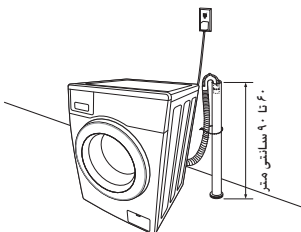

مرحله ۵

روشن کردن ماشین لباسشویی

سیم برق را به پریز بزنید. یک پریز برق ۲۲۰ تا ۲۴۰ ولت / ۵۰ هرتز مجاز که توسط یک فیوز یا مدار شکن محافظت شده است. (برای کسب اطلاعات بیشتر در مورد لزومات برقی و گراند کردن به صفحه ۱۴ مراجعه شود.)

اجرای آزمایشی

با اجرای چرخه آبکشی و گردش پس از اتمام نصب. مطمئن شوید که ماشین لباسشویی را درست نصب می کنید.

مرحله ۶

حالت Calibration (میزان کردن)


ماشین لباسشویی Samsung وزن توده لباس ها را به طور خودکار شناسایی می کند. برای شناسایی دقیق تر وزن. لطفاً حالت Calibration (میزان کردن) را پس از نصب اجرا کنید. حالت Calibration (میزان کردن) با اجرای مراحل زیر انجام می شود.

۱. لباس یا هرگونه محتویات را از ماشین خارج کرده و ماشین را خاموش کنید.
۲. دکمه Temp (دما) و دکمه Delay End (تأخیر در خاتمه) را با هم فشار داده و دکمه Power (روشن/خاموش) را نیز فشار دهید. سپس ماشین روشن می شود.
۳. دکمه Start/Pause (شروع/مکث) را برای فعال کردن "Calibration Mode" (حالت میزان کردن) فشار دهید.
۴. نشئت در جهت عقربه ساعت و خلاف عقربه ساعت برای تقریباً ۳ دقیقه گردش می کند.
۵. هنگامیکه "Calibration Mode" (حالت میزان کردن) تمام شد. "END(En)" (پایان) بر روی صفحه نمایشگر ظاهر شده و ماشین به طور خودکار خاموش می شود. حالا می توان از ماشین لباسشویی استفاده کرد.

شستشوی مقداری لباس

مشکل ترین بخش شستشوی لباس با ماشین لباسشویی Samsung جدید شما تصمیم گیری در مورد این است که کدام دسته لباس را اول بشویید.

شستشو برای بار اول

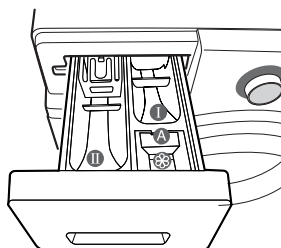

قبل از شستن لباس ها برای بار اول، بایستی یک چرخه کامل خالی (یعنی بدون گذاشتن لباس) را اجرا کنید.

۱. دکمه **Power** (روشن/خاموش) را فشار دهید.
 ۲. کمی ماده شوینده را در محفظه ماده شوینده ① در کشوی ماده شوینده اضافه کنید.
 ۳. جریان آب به ماشین لباسشویی را باز کنید.
 ۴. دکمه **Start/Pause** (شروع/مکث) را فشار دهید.
- اینکار هرگونه آبی که ممکن است از هنگام انجام آزمایش سازنده ماشین در آن باقی مانده باشد را تخلیه خواهد کرد.

محفظه ①: شوینده برای پیش شستشو ویا آهار.
محفظه ②: ماده شوینده برای شستشوی اصلی. نرم کننده آب. عامل پیش خیساندن. ماده سفیدکننده و فرآورده پاک کننده لکه.
 برای استفاده از شوینده مایع، از جعبه مایع شوینده استفاده کنید (به صفحه ۳۱ دفترچه راهنما برای مدل مربوطه مراجعه شود). پودر شوینده را به داخل جعبه مایع شوینده اضافه نکنید.


محفظه ③: مواد افزودنی از قبیل نرم کننده پارچه ویا فرم دهنده (بالا تر از لبه پایینی (حداکثر) "A" پر نکنید).

دستورات اولیه

۱. لباس ها را در داخل ماشین لباسشویی قرار دهید.
- ماشین لباسشویی را زیادی پر نکنید. برای تعیین ظرفیت برای هر نوع لباس، به جدول صفحه ۳۰ مراجعه کنید.
- مطمئن شوید که لباس ها در درجه گیر نکنند چون ممکن است موجب نشت آب شود.
- ممکن است پس از یک چرخه شستشو مقداری ماده شوینده در قسمت های لاستیکی جلوی ماشین لباسشویی باقی بماند.
- هرگونه ماده شوینده باقیمانده را خارج کنید چون ممکن است موجب نشت آب شود.
- به شیشه درجه ماشین لباسشویی در حین کار دست نزنید چون ممکن است داغ باشد.
- کشوی شوینده یا فیلتر کثافات ماشین لباسشویی را در حین کار باز نکنید چون ممکن است در معرض آب یا بخار داغ قرار گیرد.
- به غیر از برنامه مراقبت در هوای آزاد، اقلام ضدآب را در چرخه شستشوی عادی نشویید.
- درجه را طوری ببندید که چفت شود.
- ماشین را روشن کنید.
- ماده شوینده و مواد افزودنی را به کشوی پخش گر اضافه کنید.
- چرخه مناسب و گزینش ها را برای توده لباس ها انتخاب کنید.
- چراغ نشانگر شستشو روشن شده و زمان تقریبی شستشو بر روی نمایشگر ظاهر خواهد شد.
- دکمه **Start/Pause** (شروع/مکث) را فشار دهید.

شستشوی مقداری لباس

استفاده از صفحه کنترل

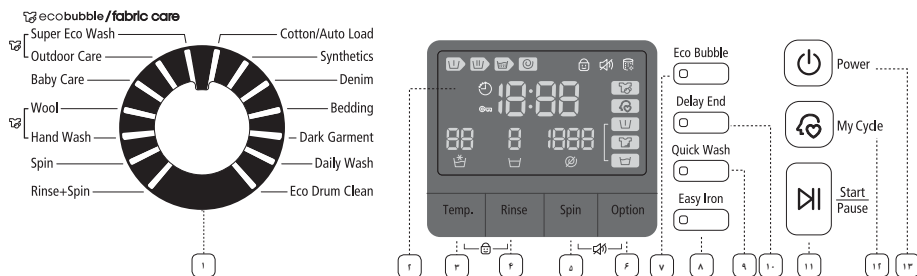

روال خشک کردن و سرعت گردش برای چرخه را انتخاب کنید.

برای اطلاعات مشروح به «شستشوی لباس ها با استفاده از گزینشگر چرخه» رجوع شود. (به صفحه ۲۸ مراجعه شود)

Cotton/Auto Load (الی ف نخ/توده لب ساتومتیک) - برای الیاف نخی. ملاقه. رومیزی. زیرپوش. حوله. پیراهن و غیره که به طور متوسط ویا کمی کثیف شده اند.
Synthetics (الیاف مصنوعی) - برای بلوز، پیراهن و غیره که به طور متوسط ویا کم کثیف شده اند. از جنس پلی استر (دیولین، تریورا)، پلی آمید (پرلون، نایلون) و ترکیبات مشابه دیگر.
Denim (پارچه جین) - سطح بالاتر آب در شستشوی اصلی و آبکشی اضافی تضمین می کند که هیچگونه پودر لباسشویی باقی نماند که ممکن است لباس های شما را لکه دار کند.
Bedding (روختواب) - برای روتختی، ملاقه، روخافی و غیره.

زیر ۲،۵ کیلوگرم و فقط ۱ نوع ملاقه و غیره را برای دستیابی به بهترین نتایج بشویید.

Dark Garment (پوشاک تیره) - آبکشی های اضافی و چرخش کاهش یافته تضمین می کند که لباس های تیره مورد علاقه شما به ملایمت شسته شده و کاملاً آبکشی شوند.
Daily Wash (شستشوی روزانه) - برای اقلام روزمره از قبیل زیرپیراهنی و پیراهن استفاده کنید.
Eco Drum Clean (تمیز کردن مقرون به صرفه تشت) - استفاده برای تمیز کردن تشت. این عملکرد کثافات و باکتری ها را از تشت تمیز می کند. استفاده عادی (بعد از هر ۴۰ شستشو) توصیه می شود. نیازی به شوینده یا ماده سفیدکننده نیست.

Super Eco Wash (شستشوی بسیار مقرون به صرفه) - Eco Bubble به دمای پایین ضمانت می کند که نتایج شستشوی ایده آل را در عین صرفه جویی موثر در مصرف نیرو کسب کنید.

Outdoor Care (پوشاک در هوای آزاد) - مورد استفاده برای پوشاک در هوای آزاد از قبیل پوشاک کوهنوردی.

پوشاک اسکی و پوشاک ورزشی، نوع پارچه شامل پردازش فناوری عملکردی و الیافی از قبیل اسپندکس، کششی و میکروفیبر می شود.

Baby Care (مراقبت از کودک) - شستشو با دمای بالا و آبکشی های اضافی تضمین می کند که هیچگونه پودر لباسشویی که لباس های نازک شما را لکه دار می کند باقی نماند.

Wool (پشمی) - فقط برای الیاف پشمی قابل شستشو با ماشین. توده لباس ها بایستی کمتر از ۲،۰ کیلوگرم باشد.

- روش پشمی لباس ها را با استفاده از عملکردهای «گهواره وار» می شوید. در طول شستشو، حرکت های گهواره وار ملایم و عملکردهای خیساندن ادامه پیدا می کنند تا از شور رفتن / از ریخت افتادگی الیاف پشمی جلوگیری شده و کاملاً تمیز شوند. توقف کارکرد ماشین نشانگر خرابی نیست.

- ماده شوینده خنثی برای روش پشمی، برای نتایج شستشوی بهبود یافته و برای مراقبت بهبود یافته از الیاف پشمی توصیه می شود.

Handwash (شستشو با دست) - یک چرخه شستشوی بسیار ملایم که به اندازه شستشو با دست ملایم است.

Spin (گردش) - برای تخلیه بیشتر آب یک چرخه گردش اضافی را اجرا می کند.

Rinse + Spin (آبکشی + چرخش) - برای لباس هایی که فقط نیاز به آبکشی دارند ویا برای اضافه کردن نرم کننده پارچه در حین آبکشی به یک توده لباس استفاده شود.

گزینشگر چرخه

1

شستشوی مقداری لباس

برای لباس هایی که کمی کثیف شده اند و کمتر از ۲ کیلوگرم لباس که فوراً نیاز دارید. حداقل در حدود ۱۵ دقیقه طول می کشد ولی بستگی به فشار آب، سختی آب، دمای ورودی آب، دمای اتاق، نوع و مقدار شستشو و میزان کثیفی، ماده شستشوی استفاده شده، تغییرات در جریان برق و گزینش های دیگری که انتخاب شده است ممکن است متفاوت باشد. این دکمه را برای انتخاب مدت چرخه شستشو مکرراً فشار دهید: ۱۵ دقیقه ← ۲۰ دقیقه ← ۳۰ دقیقه ← ۴۰ دقیقه ← ۵۰ دقیقه ← ۱ ساعت ← خاموش  مقدار پودر/مایع شوینده بایستی زیر ۲۰ گرم (برای ۲ کیلوگرم لباس) باشد یا در غیراینصورت فشار ممکن است که شوینده در لباس ها باقی بماند.	دکمه انتخاب QUICK WASH (شستشوی سریع) ۹
این دکمه را مکرراً فشار دهید تا در بین گزینش های تأخیر در خاتمه چرخه بزنید (از ۳ تا ۱۹ ساعت به فواصل یک ساعته). ساعت نمایش داده شده نشانگر زمانی است که چرخه شستشو خاتمه پیدا خواهد کرد.	دکمه گزینش DELAY END (تأخیر در خاتمه) ۱۰
برای توقف و شروع دوباره يك چرخه فشار دهید.	دکمه انتخاب START/PAUSE (شروع/توقف) ۱۱
چرخه شستشوی دلخواه خود را که شامل دما، چرخش، میزان کثیفی، گزینش و غیره می شود انتخاب کنید.	دکمه انتخاب MY CYCLE (چرخه شستشوی من) ۱۲
برای روشن کردن ماشین لباسشویی يك بار فشار دهید. برای خاموش کردن ماشین لباسشویی دوباره فشار دهید. اگر ماشین لباسشویی به مدت ۱۰ دقیقه بدون اینکه دکمه ای فشرده شود روشن باقی بماند. ماشین به طور خودکار خاموش می شود.	دکمه POWER (روشن/خاموش) ۱۳


Child Lock (قفل کودک)

عملکرد قفل کودک به شما امکان می دهد تا دکمه ها را قفل کنید تا نتوان چرخه شستشویی که انتخاب کرده اید را تغییر داد.

فعال/غیرفعال کردن

اگر می خواهید عملکرد قفل کودک را فعال یا غیرفعال کنید، دکمه های Temp (دما) و Rinse (آبکشی) را با هم برای ۳ ثانیه فشار دهید. Child Lock (قفل کودک) هنگامیکه این ویژگی فعال شده روشن خواهد شد.

هنگامیکه عملکرد قفل کودک فعال شده، فقط دکمه Power (روشن/خاموش) کار می کند. عملکرد قفل کودک حتی بعد از خاموش یا روشن کردن ماشین ویا بعد از قطع و دوباره وصل کردن سیم برق روشن باقی می ماند.

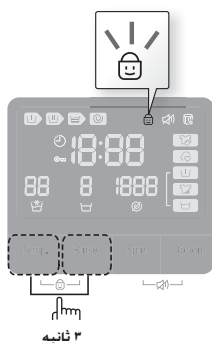

Sound Off (صدا خاموش)

عملکرد صدای خاموش را می توان در حین هر روش شستشویی انتخاب کرد. هنگامیکه این عملکرد انتخاب شود، صدا برای همه روش های شستشو خاموش می شود. حتی اگر صدا مکرراً روشن و خاموش شود، تنظیمات باقی می ماند.

فعال/غیرفعال کردن

اگر می خواهید عملکرد صدای خاموش را فعال یا غیرفعال کنید، دکمه های Spin (گردش) و Option (گزینه) را با هم برای ۳ ثانیه فشار دهید. Sound Off (صدای خاموش) هنگامیکه این ویژگی فعال شده روشن خواهد شد.



شستشوی مقداری لباس

Delay End (تأخیر در خاتمه)

- می توانید ماشین لباسشویی را طوری تنظیم کنید که بعداً شستشو را تمام کند. تأخیر بین ۳ تا ۱۹ ساعت را می توان انتخاب کرد (در فواصل ۱ ساعته). ساعت نمایش داده شده نشانگر زمانی است که شستشو خاتمه پیدا خواهد کرد.
۱. ماشین لباسشویی را به طور دستی و یا خودکار برطبق نوع لباس هایی که می شوید تنظیم کنید.
 ۲. دکمه Delay End (تأخیر در خاتمه) را مکرراً فشار دهید تا مدت تأخیر تنظیم شود.
 ۳. دکمه Start/Pause (شروع/مکث) را فشار دهید. نمایشگر "Delay End (تأخیر در خاتمه)" روشن خواهد شد و ساعت شروع به شمارش معکوس می کند تا به زمان شروع برسد.
 ۴. برای لغو عملکرد Delay End (تأخیر در خاتمه) دکمه Power (روشن/خاموش) را فشار داده سپس ماشین لباسشویی را دوباره روشن کنید.

My Cycle (چرخه شستشوی من)

- به شما امکان می دهد تا شستشوی دلخواهتان (دما، چرخش، مقدار کثیفی و غیره) را به آسانی توسط یک دکمه فعال کنید. با فشردن دکمه My Cycle (چرخه شستشوی من)، لباس ها را وارد کرده و از گزینش های ذخیره شده چرخه شستشوی من استفاده کنید. چراغ "My Cycle (چرخه شستشوی من)" فعال شدن را نشان خواهد داد. چراغ های روش و گزینش انتخاب شده نیز چشمک خواهند زد.
- می توانید همه گزینش ها را به ترتیب زیر در حالت چرخه شستشوی من تنظیم کنید.
۱. منبع آب را باز کنید.
 ۲. دکمه Power (روشن/خاموش) را فشار دهید.
 ۳. چرخه شستشو را با استفاده از گزینشگر چرخه انتخاب کنید.
 ۴. پس از انتخاب چرخه شستشو، هریک از گزینش ها را تنظیم کنید.
-  برای تنظیمات گزینش موجود برای هر چرخه شستشو به «جدول چرخه شستشو» در صفحه ۴۰ مراجعه شود.
۵. سپس می توانید چرخه شستشو و گزینش های انتخاب شده را با فشردن و نگه داشتن دکمه My Cycle (چرخه شستشوی من) برای بیش از ۳ ثانیه در حالت چرخه شستشوی من ذخیره کنید. چرخه شستشو و گزینش هایی که انتخاب می کنید دفعه بعد که عملکرد چرخه شستشوی من را انتخاب می کنید نمایان خواهند شد.
- می توانید تنظیمات چرخه شستشوی من را توسط تکرار روال فوق تغییر دهید.
-  دفعه بعد که عملکرد چرخه شستشوی من را انتخاب می کنید، تنظیمی که آخرین بار استفاده شد نمایان خواهد شد.
-  اگر چرخه شستشوی من را فشار داده و در ظرف ۳ ثانیه رها کنید، روال و گزینش هایی که قبلاً ذخیره شده نمایان می شوند. اگر چرخه شستشوی من را برای ۳ ثانیه یا بیشتر فشار داده و نگه دارید، روش شستشو و گزینش هایی که در حال حاضر تنظیم شده اند ذخیره شده و چراغ برای ۳ ثانیه چشمک می زند.

Eco Bubble (حباب مقرون به صرفه)


سیستم حباب مقرون به صرفه به ماده شوینده امکان می دهد تا به طور یک دست توزیع شده و سریع تر و عمیق تر به پارچه ها نفوذ کند.

عملکرد حباب به غیر از روش تمیز کردن مقرون به صرفه تثبیت در همه روش های شستشو موجود است و دسترسی به این عملکرد به ترتیب زیر است.

روش شستشو	عملکرد حباب	لغو عملکرد حباب
Cotton/Auto Load (الی ف نخی/توده لب سائومتیک). Synthetics (الیاف مصنوعی). Denim (پارچه جین). Bedding (رختخواب). Dark Garment (پوشاک تیره). Daily Wash (شستشوی روزانه)	موجود است	موجود است
Super Eco Wash (شستشوی بسیار مقرون به صرفه). Outdoor Care (پوشاک در هوای آزاد). Baby Care (مراقبت از کودک). Wool (پشمی). Handwash (شستشو با دست)		موجود نیست
Eco Drum Clean (تمیز کردن مقرون به صرفه شست)	موجود نیست	-

• می توان بستگی به روش شستشو، عملکرد حباب دیگری را به کار گرفت.

Eco Bubble انتخاب پیش فرض است. آنرا برای لغو انتخاب گزینش حباب یکبار فشار دهید. برای انتخاب گزینش حباب دوباره فشار دهید.

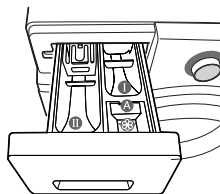

۱. درجه را باز کردم. لباس ها را در داخل تشت شستشو گذاشته و درجه را ببندید.
۲. دکمه Power (روشن/خاموش) را فشار دهید.
۳. یک عملکرد را انتخاب کنید.
۴. مقدار مناسب از شوینده و نرم کننده پارچه را براساس مقدار لباس در محفظه های مربوطه اضافه کرده و کشوی شوینده را ببندید.
- مقدار لازم شوینده را در محفظه شوینده اضافه کنید ① و نرم کننده پارچه را در محفظه نرم کننده ② درست زیر خط مینای (حداکثر) "A" اضافه کنید.
- هنگامیکه روش پیش شستشو انتخاب شده، شوینده را در محفظه پیش شستشو ③ نیز اضافه کنید.
- برای استفاده از مایع شوینده، جعبه مایع شوینده را در کشو قرار دهید (به بخش «مایع شوینده» در صفحه ۳۱ رجوع شود).

پودر شوینده را به داخل جعبه مایع شوینده اضافه نکنید.

۵. دکمه Start/Pause (شروع/مکث) را فشار دهید.
- دکمه Start/Pause (شروع/مکث) را فشار دهید تا شستشو شروع شود.
- مقدار لباس به طور خودکار مشخص شده و لباس ها شسته می شوند.
- هنگامیکه یک عملکرد ماشین لباسشویی شروع می شود، می توانید لباس ها را اضافه کنید یا عملکرد حباب را انتخاب کنید.

- استفاده از شوینده به مقدار کافی موجب ایجاد حباب به اندازه کافی می شود.
- لطفاً فیلتر کثیف را مکرراً تمیز کنید. تمیز کردن دوره ای به ایجاد حباب های کافی کمک می کند.
- بستگی به نوع شوینده و لباس ها، حباب ها ممکن است جذب شده و به نظر کم بیایند.
- با اینکه هنگام شروع شستشو حباب ها ایجاد می شوند، ممکن است چند دقیقه طول بکشد تا کاربر آنها را ببیند.

شستشوی مقداری لباس

شستشوی لباس ها با استفاده از گزینشگر چرخه شستشو

ماشین لباسشویی جدید شما شستشوی لباس ها را با استفاده از سیستم کنترل خودکار "Fuzzy Control" (کنترل مبهم) Samsung آسان می کند. هنگامیکه یک برنامه شستشو را انتخاب می کنید، ماشین دمای صحیح، زمان شستشو و سرعت شستشو را تنظیم می کند.

۱. شیر آب ظرفشویی را باز کنید.
 ۲. دکمه Power (روشن/خاموش) را فشار دهید.
 ۳. دریچه را باز کنید.
 ۴. لباس ها را به طور جداگانه و سوا در تشت بگذارید بدون اینکه زیادی پر شود.
 ۵. دریچه را ببندید.
 ۶. ماده شوینده، نرم کننده و (در صورت لزوم) ماده پیش شستشو را به محفظه های مناسب اضافه کنید.
- پیش شستشو تنها زمانی موجود است که چرخه های الیاف Cotton/Auto Load (الی ف نخ/توده لب ساتومیتیک)، Synthetics (الیاف مصنوعی)، Denim (پارچه جین)، Bedding (رختخواب)، Dark Garment (پوشاک تیره)، Daily Wash (شستشوی روزانه)، Super Eco Wash (شستشوی بسیار مقرون به صرفه) و Baby Care (مراقبت از کودک) انتخاب شوند. تنها زمانی لازم است که لباسهای شما به شدت کثیف شده باشند.
۷. از گزینشگر چرخه شستشو برای انتخاب چرخه مناسب براساس نوع جنس استفاده کنید:
Cotton/Auto Load (الی ف نخ/توده لب ساتومیتیک)، Synthetics (الیاف مصنوعی)، Denim (پارچه جین)، Bedding (رختخواب)، Dark Garment (پوشاک تیره)، Daily Wash (شستشوی روزانه)، Super Eco Wash (شستشوی بسیار مقرون به صرفه)، Outdoor Care (پوشاک در هوای آزاد)، Baby Care (مراقبت از کودک)، Wool (پشمی)، Handwash (شستشو با دست)، نشانگرهای مربوطه در صفحه کنترل روشن خواهند شد.
 ۸. در این هنگام، می توانید با فشردن دکمه گزینش مناسب، دمای شستشو، مقدار آبکشی، سرعت چرخش و مدت تأخیر را کنترل کنید.
 ۹. دکمه Start/Pause (شروع/مکث) را فشار دهید و شستشو شروع خواهد شد. نشانگر روند شستشو روشن خواهد شد و مدت باقی مانده برای چرخه بر روی نمایشگر ظاهر خواهد شد.

گزینش توقف

در ظرف ۵ دقیقه از شروع يك شستشو، می توان اقلام شستشو را اضافه کرد/بیرون آورد.

۱. دکمه Start/Pause (شروع/مکث) را برای باز کردن دریچه فشار دهید.
۲. پس از بستن دریچه، دکمه Start/Pause (شروع/مکث) را برای شروع دوباره ماشین لباسشویی فشار دهید.

هنگامیکه چرخه تمام شد:

- بعد از اینکه کل چرخه تمام شد، ماشین به طور خودکار خاموش خواهد شد.
۱. دریچه را باز کنید.
 ۲. لباس ها را خارج کنید.

شستشوی لباس ها به طور دستی

می توانید لباس ها را بدون استفاده از گزینشگر چرخه شستشو به طور دستی بشویید.

۱. منبع آب را باز کنید.
۲. دکمه Power (روشن/خاموش) را بر روی ماشین لباسشویی فشار دهید.
۳. دریچه را باز کنید.
۴. لباس ها را به طور جداگانه و سوا وارد تشت کنید بدون اینکه زیادی پر شود.
۵. دریچه را ببندید.
۶. ماده شوینده و در صورت لزوم نرم کننده و ماده پیش شستشو را در محفظه های مناسب اضافه کنید.
۷. دکمه Temp (ما) را برای انتخاب دما فشار دهید. (آب سرد ۲۰ درجه، ۳۰ درجه، ۴۰ درجه، ۶۰ درجه و ۹۵ درجه سانتی گراد)
۸. دکمه Rinse (آبکشی) را برای انتخاب تعداد چرخه های آبکشی لازم فشار دهید.
- حد اکثر تعداد چرخه های آبکشی پنج است.
- طول مدت شستشو به نسبت افزایش پیدا می کند.
۹. دکمه Spin (گردش) را برای انتخاب سرعت گردش فشار دهید. (X): بدون چرخش)
۱۰. دکمه Delay End (تأخیر در خاتمه) را مکرراً فشار دهید تا در بین گزینش های تأخیر در خاتمه چرخ برزید (از ۳ تا ۱۹ ساعت به فواصل یک ساعته). ساعت نمایش داده شده نشانگر زمانی است که شستشو خاتمه پیدا خواهد کرد.
۱۱. دکمه Start/Pause (شروع/مکث) را فشار دهید و ماشین چرخه را شروع خواهد کرد.

رهنمودهای لباسشویی

این رهنمودهای ساده را برای لباس های تمیزتر و شستشوی مقرون به صرفه تر دنبال کنید.

همیشه برچسب مراقبت بر روی لباس را قبل از شستشو کنترل کنید.



لباس های خود را بر طبق خصوصیت های زیر دسته بندی کنید:

- برچسب مراقبت: لباس ها را بر طبق الیاف نخی، پارچه های مخلوط، مصنوعی، ابریشمی، پشمی و رایون دسته بندی کنید.
- رنگ: لباس های سفید و رنگی را جدا کنید. اقلام رنگی نو را جداگانه بشویید.
- اندازه: قرار دادن اقلام به اندازه های مختلف در یک توده، کارکرد شستشو را بهبود خواهد داد.
- ظرافت: اقلام ظریف را با استفاده از چرخه شستشوی Delicate (ظریف) برای اقلام پشمی خالص نو، پرده و ابریشمی به طور جداگانه بشویید. برچسب های اقلامی که می شویید را کنترل کنید و یا به جدول مراقبت پارچه در ضمیمه رجوع کنید.

خالی کردن جیب ها

همه جیب های لباس ها را قبل از هر شستشو خالی کنید. اشیاء سخت کوچک و به شکل نامنظم از قبیل سکه، چاقو، سنجاق و گیره کاغذ ممکن است به ماشین لباسشویی صدمه بزنند. سعی نکنید لباس هایی که سنگ، دکمه بزرگ و یا هرگونه شیء فلزی سنگین دارند را بشویید.

فلزات روی لباس ممکن است علاوه بر لباس ها به تشت آسیب وارد کنند. لباس هایی که دکمه دارند و لباس های گلدوزی شده را قبل از شستشو وارونه کنید. اگر زیپ شلوار در حین شستشو باز می باشد، ممکن است به سید چرخش آسیب وارد شود. زیپ بایستی بسته شده و قبل از شستشو با یک ریسمان محکم شود.

لباس هایی که بندهای دراز دارند ممکن است به لباس های دیگر پیچ خورده و به آنها آسیب وارد کنند. مطمئن شوید که بند ها را قبل از شستشو محکم بسته باشید.

پیش شستشوی الیاف نخی

ماشین لباسشویی جدید شما با استفاده از مواد شوینده مدرن نتایج ایده آل شستشو ارائه خواهد کرد و بنابراین در مصرف انرژی، وقت، آب و ماده شوینده صرفه جویی می شود. با این وجود، اگر الیاف نخی بسیار کثیف هستند، از پیش شستشو به همراه یک ماده شوینده براساس پروتئین استفاده کنید.

شستشوی مقداری لباس

مشخص کردن ظرفیت شستشو

ماشین لباسشویی را زیاده روی نکنید در غیر اینصورت لباس ها ممکن است به خوبی شسته نشوند. از جدول زیر برای مشخص کردن ظرفیت شستشو برای نوع لباس هایی که می شوید استفاده کنید.

ظرفیت شستشو		نوع پارچه
P149SIH	F14SIH / F14SWH	مدل
۹/۰ کیلوگرم	۸/۰ کیلوگرم	Cotton/Auto Load (الی ف نخ/توده لب ساتومتیک)
۲/۵ کیلوگرم	۲/۰ کیلوگرم	Synthetics (الیاف مصنوعی)
۲/۰ کیلوگرم	۲/۰ کیلوگرم	Denim (پارچه جین)
۲/۰ کیلوگرم	۲/۰ کیلوگرم	Bedding (رختخواب)
۲/۰ کیلوگرم	۲/۰ کیلوگرم	Outdoor Care (پوشاک در هوای آزاد)
۲/۰ کیلوگرم	۲/۰ کیلوگرم	Wool (پشمی)

-  هنگامیکه لباس ها نامتوازن هستند ("UE" در نمایشگر روشن می شود). توده لباس ها را دوباره توزیع کنید. اگر لباس ها نامتوازن باشند، ممکن است بر روی کیفیت گردش تأثیر بگذارد.
- هنگام شستشوی ملافه یا روحاف. زمان شستشو ممکن است طولانی تر شده ویا کیفیت گردش تنزل پیدا کند.
- برای ملافه یا روحاف. ظرفیت توده لباس توصیه شده ۲.۵ کیلوگرم یا کمتر می باشد.
-  مطمئن شوید که کمرست ها (قابل شستشو در آب) را در داخل یک تور لباسشویی قرار دهید (به طور جداگانه خریداری می شود).
- قسمت فلزی کمرست ممکن است پارچه را سوراخ کرده و به لباس ها آسیب وارد کند. بنابراین مطمئن شوید که آنها را داخل یک تور ظرفیت لباسشویی قرار دهید.
- لباس های کوچک و سبک از قبیل جوراب، دستکش، جوراب ساق بلند و دستمال ممکن است به دور دریچه گیر کنند. آنها را داخل یک تور ظرفیت لباسشویی قرار دهید.
-  تور لباسشویی را به تنهایی بدون لباس های دیگر نشوید. این موضوع ممکن است منجر به لرزش های غیرعادی شود که قادر به حرکت ماشین لباسشویی است و موجب حادثه ای شود که منجر به آسیب بدنی می شود.

اطلاعات در مورد شوینده و مواد افزودنی


از چه شوینده ای استفاده شود

- نوع ماده شوینده که استفاده می کنید بایستی براساس نوع پارچه (نخی، مصنوعی، اقلام ظرفیت، پشمی)، رنگ، دمای شستشو و مقدار کثیفی باشد. همیشه از ماده شوینده «کم کف» استفاده کنید که برای ماشین های لباسشویی خودکار طراحی شده است. توصیه های سازنده ماده شوینده را براساس وزن لباس ها، میزان کثیفی و سختی آب در منطقه تان دنبال کنید. اگر نمی دانید که سختی آب به چه اندازه است، از سازمان آب محلی تان سؤال کنید.
- از ماده شوینده که سخت ویا جامد شده استفاده نکنید چون ممکن است ماده شوینده در چرخه آبکشی باقی بماند. ممکن است باعث شود که ماشین لباسشویی به طور صحیح آبکشی نکند ویا منجر به مسدود شدن مخرج لبریز شود.
- 

کشیوی ماده شوینده

ماشین لباسشویی شما محفظه های جداگانه برای پخش کردن شوینده و نرم کننده پارچه دارد. همه مواد افزودنی لباسشویی را قبل از شروع ماشین لباسشویی در محفظه صحیح اضافه کنید.

کشیوی شوینده را در حین کار ماشین لباسشویی باز نکنید چون ممکن است در معرض آب یا بخار داغ قرار بگیرید.

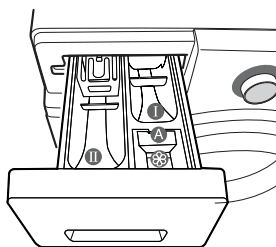

۱. کشیوی شوینده را در سمت چپ صفحه کنترل به بیرون بکشید.

۲. قبل از اینکه ماشین لباسشویی را روشن کنید (II) مقدار توصیه شده شوینده را مستقیماً در محفظه شوینده بریزید.

برای استفاده از شوینده مایع، از جعبه مایع شوینده استفاده کنید (به «مایع شوینده» برای مدل مربوطه مراجعه شود).


• پودر شوینده را به داخل جعبه مایع شوینده اضافه نکنید.

۳. مقدار توصیه شده نرم کننده پارچه را در محفظه نرم کننده بریزید (III) در صورتیکه لازم باشد. از خط حداکثر پر کردن (A) تجاوز نکنید.

هیچگونه پودر/مایع شوینده را به محفظه ماده نرم کننده (III) اضافه نکنید.



احتیاط

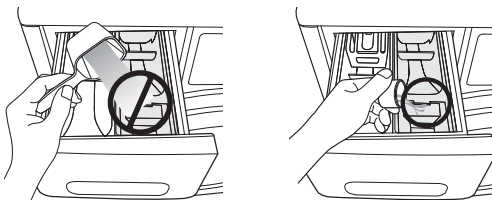


۴. هنگام استفاده از گزینش Prewash (پیش شستشو)، مقدار توصیه شده شوینده را در محفظه پیش شستشو بریزید (I).

هنگام شستن اقلام بزرگ از انواع ماده شوینده زیر استفاده نکنید.

- شوینده از نوع قرص و کپسول
- شوینده با استفاده از یک توپ و تور

نرم کننده پارچه و حالت دهنده هم فشرده ویا غلیظ بایستی قبل از اینکه به داخل محفظه ریخته شود با کمی آب رقیق شوند (از مسدود شدن مخرج لبریز جلوگیری می شود).

مراقبت باشید که هنگام بستن کشیوی شوینده بعد از افزودن نرم کننده پارچه در محفظه شوینده آبکشی، نرم کننده پارچه لبریز نشود.

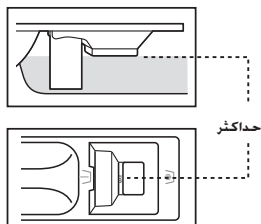

حداکثر


مایع شوینده (مدل های برگزیده)

برای استفاده از مایع شوینده، جعبه مایع شوینده را در بخش شستشوی اصلی کشیوی شوینده قرار داده و مایع شوینده را به داخل جعبه مایع شوینده بریزید.

• بالای خط MAX (حداکثر) پر نکنید.

• هنگام استفاده از پودر شوینده، جعبه مایع شوینده را از کشیوی شوینده خارج کنید. پودر شوینده توسط جعبه مایع شوینده پخش نخواهد شد.

• پس از شستشو، ممکن است مقداری مایع در کشیوی شوینده باقی بماند.

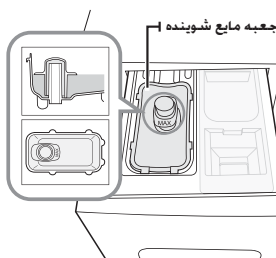


تمیز کردن و مراقبت از ماشین لباسشویی

تمیز نگه داشتن ماشین لباسشویی طرزکار آن را بهبود داده. از تعمیرات بیهوده جلوگیری کرده و عمر ماشین را طولانی تر می کند.


ECO DRUM CLEAN (تمیز کردن مقرون به صرفه تشنت)

این روش شستشو یک روش خود تمیزکننده است که کپک هایی که ممکن است در داخل ماشین لباسشویی ایجاد شوند را تمیز می کند.

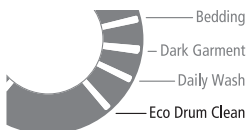

۱. دکمه Power (روشن/خاموش) را فشار دهید.
۲. گزینشگر چرخه را روی روش تمیزکردن مقرون به صرفه تشنت قرار دهید.
 - تنها می توانید از عملکرد تأخیر در خاتمه استفاده کنید.
 - دمای آب در طول تمیز کردن مقرون به صرفه تشنت روی ۷۰ درجه سانتی گراد تنظیم می شود.

❗ نمی توانید دما را تغییر دهید.

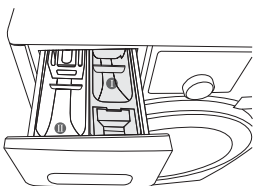


۳. مقدار کافی از ماده تمیز کننده را در محفظه شوینده قرار داده ⑪ و کشوی شوینده را ببندید (هنگام تمیز کردن تشنت با استفاده از ماده تمیز کننده).
 - حتماً از ماده تمیزکننده توصیه شده برای تمیز کردن تشنت استفاده کنید.
 - مواد تمیزکننده تشنت از نوع پودر و از نوع مایع وجود دارد. ماده تمیز کننده از نوع مایع تنها با جعبه مایع شوینده (گزینش) موجود است.

۴. دکمه Start/Pause (شروع/مکث) را فشار دهید.


- اگر دکمه Start/Pause (شروع/مکث) را فشار دهید. روش تمیز کردن مقرون به صرفه تشنت شروع می شود.
- با استفاده از روش تمیز کردن مقرون به صرفه تشنت. می توانید تشنت را بدون استفاده از ماده تمیزکننده تمیز کنید.
- هنگامیکه لباس ها در داخل ماشین لباسشویی هستند. هرگز از روش تمیز کردن مقرون به صرفه تشنت استفاده نکنید. اینکار ممکن است منجر به آسیب وارد شدن به الیاف پارچه یا مشکلاتی برای ماشین لباسشویی شود.
- در روش تمیز کردن مقرون به صرفه تشنت. هرگز از شوینده عادی استفاده نکنید.
- فقط از ۱/۱۰ مقدار توصیه شده ماده تمیزکننده تشنت که توسط تولید کننده ماده تمیز کننده توصیه شده استفاده کنید.
- چون یک ماده سفید کننده حاوی کلر ممکن است موجب رنگ رفتگی محصول شود. حتماً از مواد سفیدکننده حاوی اکسیژن استفاده کنید.
- ماده تمیزکننده از نوع پودر: از یک (ماده سفیدکننده نوع پودر) یا (ماده تمیز کننده فقط برای تمیزکردن تشنت) استفاده کنید.
- ماده تمیزکننده از نوع مایع: از یک (ماده سفیدکننده حاوی اکسیژن نوع مایع) یا (ماده تمیز کننده فقط برای تمیزکردن تشنت) استفاده کنید.



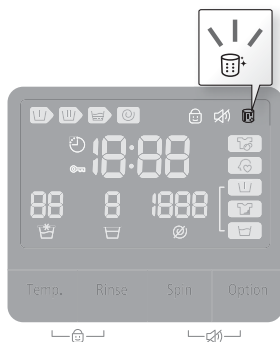


- عملکرد هشدار خودکار تمیزکردن مقرون به صرفه تنش**
- اگر نشانگر «تمیزکردن مقرون به صرفه تنش» در صفحه نمایش و چراغ در گزینشگر چرخه شستشو پس از شستشو روشن شوند، این موضوع نشان می دهد که تنش بایستی تمیز شود. در این صورت، لباس ها را از ماشین لباسشویی خارج کرده، ماشین را روشن کرده و تنش را توسط اجرای روش تمیزکردن مقرون به صرفه تنش تمیز کنید.
 - اگر روش تمیزکردن مقرون به صرفه تنش را اجرا نکنید، نشانگر «تمیزکردن مقرون به صرفه تنش» در صفحه نمایش و چراغ در گزینشگر چرخه شستشو خاموش می شوند. ولی نشانگر «تمیزکردن مقرون به صرفه تنش» در صفحه نمایش و چراغ در گزینشگر چرخه شستشو پس از اجرای دوبار شستشو دومرتبه روشن می شوند. با این وجود، این موضوع موجب مشکلاتی برای ماشین لباسشویی نخواهد شد.
 - با اینکه معمولاً هشدار خودکار تمیزکردن مقرون به صرفه تنش در حدود یک بار در ماه نمایان می شود، تعداد دفعات ممکن است بستگی به تعداد دفعاتی که از ماشین لباسشویی استفاده می شود متفاوت باشد.
 - در صورت وقوع هشدار، لطفاً فیلتر کثافات را نیز تمیز کنید (به بخش «تمیز کردن فیلتر کثافات» در صفحه ۳۴ مراجعه شود). در غیراینصورت ممکن است کارایی عملکرد حباب تقلیل پیدا کند.

تخلیه ماشین لباسشویی در موقعیت اضطراری

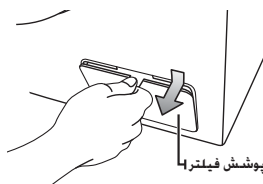

۱. دوشاخه ماشین لباسشویی را از پریز بکشید.
۲. پوشش فیلتر را توسط به پایین فشار دادن و کشیدن دسته آن باز کنید.

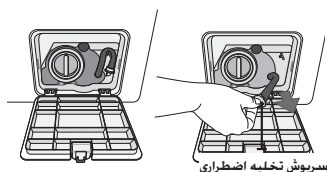

۳. سروش تخلیه اضطراری را توسط کشیدن آن باز کنید.



۴. سروش را در پایان لوله تخلیه اضطراری گرفته و آنرا به آهستگی بیرون بکشید.
۵. اجازه دهید که همه آب به داخل یک کاسه روان شود.
۶. آب باقیمانده ممکن است از مقداری که انتظار داشتید بیشتر باشد. کاسه بزرگتری را مهیا کنید.
۷. سروش تخلیه اضطراری و لوله تخلیه را سرجایشان وارد کنید.
۷. پوشش فیلتر را سرجایش بگذارید.

تمیز کردن و مراقبت از ماشین لباسشویی

تمیز کردن فیلتر کثافات


توصیه می‌کنیم که فیلتر کثافات را ۵ یا ۶ بار در سال و یا هنگامیکه پیغام "5E" نمایان می‌شود تمیز کنید. (به «تخلیه ماشین لباسشویی در موقعیت اضطراری» در بخش قبل مراجعه شود)

اگر فیلتر کثافات مواد خارجی را جمع کند، کارایی عملکرد حباب تنزل خواهد یافت.



قبل از تمیز کردن فیلتر کثافات، مطمئن شوید که سیم برق را از پریز بکشید.

احتیاط

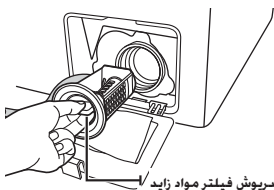

۱. ابتدا آب باقیمانده را خارج کنید (به «تخلیه ماشین لباسشویی در وضعیت اضطراری» در صفحه ۳۳ مراجعه کنید).

۲. اگر فیلتر را بدون تخلیه آب باقیمانده جدا کنید، آب باقیمانده ممکن است به خارج ترشح کند.



۳. با استفاده از یک کلید یا سکه پوشش فیلتر را باز کنید.


۴. سربوش تخلیه اضطراری را با چرخاندن آن به سمت چپ باز کرده و همه آب را تخلیه کنید.

۵. سربوش فیلتر کثافات را باز کنید.

۶. هرگونه کثافت و یا مواد دیگر را از فیلتر کثافات بشویید. مطمئن شوید که پروانه پمپ تخلیه در پشت فیلتر کثافات مسدود نشده باشد.

۷. سربوش فیلتر کثافات را سرجایش بگذارید.

۸. پوشش فیلتر را سرجایش بگذارید.

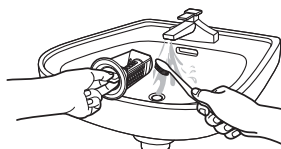

هنگامیکه ماشین کار می‌کند سربوش فیلتر کثافات را باز نکنید چون ممکن است آب بیرون بریزد.



احتیاط

• حتماً سربوش فیلتر را بعد از تمیز کردن فیلتر سرجایش بگذارید. اگر فیلتر در ماشین نباشد، ممکن است ماشین لباسشویی درست کار نکند یا آب نشت کند.

• فیلتر بایستی بعد از تمیز کردن فیلتر درست سرجایش نصب شود.


تمیز کردن سطح بیرونی

۱. سطوح بیرونی ماشین لباسشویی که شامل پنل کنترل می‌شود را با یک پارچه نرم و محلول شستشوی ناساینده خانگی تمیز کنید.

۲. برای خشک کردن سطوح بیرونی از یک پارچه نرم استفاده کنید.


۳. بر روی ماشین لباسشویی آب جاری نکنید.

تمیز کردن کشتو و حفره کشتوی شوینده

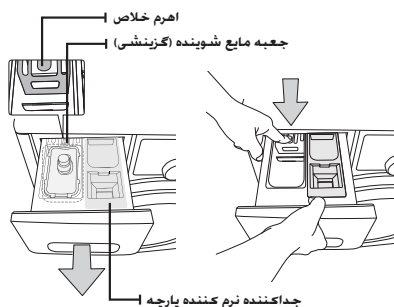


۱. اهرم رها کننده در داخل کشتوی ماده شوینده را فشار داده و کشتو را به بیرون بکشید.
۲. جداکننده نرم کننده پارچه و جعبه مایع شوینده (گزنیشی) را از کشتوی شوینده خارج کنید.

۳. همه قطعات را زیر آب جاری بشوید.

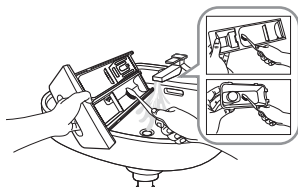

۴. حفره کشتو را با یک مسواک کهنه تمیز کنید.
۵. جداکننده نرم کننده پارچه و جعبه مایع شوینده (گزنیشی) را با کشیدن آن به طور محکم به داخل کشتو سرجایش بگذارید.
۶. کشتو را سرجایش فشار دهید.
۷. برای خارج کردن ماده شوینده باقی مانده، یک چرخه شستشو را بدون گذاشتن لباس در تنگت اجرا کنید.

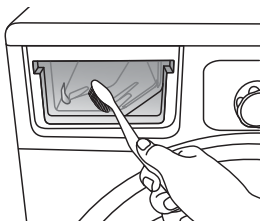

تمیز کردن فیلتر توری شیلنگ آب

حداقل سالی یکبار ویا هنگامیکه پیغام خطای "4E" نمایان می شود. بایستی فیلتر توری شیلنگ آب را تمیز کنید:

۱. منبع آب به ماشین لباسشویی را ببندید.
۲. شیلنگ را از پشت ماشین لباسشویی باز کنید. برای جلوگیری از فوران آب به خارج در نتیجه فشار هوا در شیلنگ، آنرا با یک پارچه بپوشانید.
۳. با یک انبردست، به آرامی فیلتر توری را از ته شیلنگ بیرون کشیده و آنرا زیر آب بگیرید تا تمیز شود. همچنین داخل و خارج اتصالی شیاردار را تمیز کنید.
۴. فیلتر را سرجایش فشار دهید.
۵. شیلنگ را دوباره به ماشین لباسشویی پیچ کنید.
۶. مطمئن شوید که اتصالی ها آب بندی شده و شیر را باز کنید.

تمیز کردن و مراقبت از ماشین لباسشویی

تعمیر یک ماشین لباسشویی یخ زده

اگر درجه حرارت به زیر دمای انجماد افت کند و ماشین لباسشویی منجمد شود:

۱. ماشین لباسشویی را از پریز بکشید.
۲. آب گرم را بر روی شیر بریزید تا شیلنگ منبع آب شل شود.
۳. شیلنگ منبع آب را جدا کرده و آنرا در آب گرم بخیسانید.
۴. آب گرم را به داخل تشت ماشین لباسشویی جاری کرده و اجازه بدهید که برای ۱۰ دقیقه باقی بماند.
۵. شیلنگ منبع آب را دوباره به شیر آب متصل کرده و کنترل کنید که منبع آب و عملکرد تخلیه عادی باشند.

انبار کردن ماشین لباسشویی

اگر لازم است که ماشین لباسشویی را برای مدت طولانی انبار کنید. بهتر است که آنرا تخلیه و قطع کنید. ممکن است در صورت باقی ماندن آب در شیلنگ ها و اجزاء داخلی قبل از انبار کردن، به ماشین لباسشویی آسیب وارد شود.

۱. چرخه شستشوی Cotton/Auto Load (الی ف نخ/توده لب ساتومتیک) را انتخاب کرده و دکمه Quick Wash (شستشوی سریع) را فشار دهید و چرخه ماشین لباسشویی را بدون گذاشتن لباس اجرا کنید.
 ۲. شیر آب را بسته و شیلنگ های ورودی را قطع کنید.
 ۳. ماشین لباسشویی را از پریز برق کشیده و درجه ماشین لباسشویی را باز بگذارید تا هوا در داخل تشت جریان پیدا کند.
- اگر ماشین لباسشویی در دمای زیر انجماد انبار شده، قبل از استفاده از آن برای آب شدن هرگونه آب باقی مانده در داخل ماشین لباسشویی وقت بگذارید. 

عیب یابی و کدهای اطلاعاتی

در موارد زیر این نکات را کنترل کنید. ماشین لباسشویی...

مشکل	راه حل
شروع به کار نمی کند	• مطمئن شوید که ماشین لباسشویی به پریز برق زده شده باشد. • مطمئن شوید که درجه به طور محکم بسته شده باشد. • مطمئن شوید که شیر منبع آب باز شده باشد. • مطمئن شوید که دکمه Start/Pause (شروع/مکث) را فشار داده باشید.
آب نیست و یا به اندازه کافی نیست	• شیر آب را کاملاً باز کنید. • مطمئن شوید که شیلنگ جریان آب منجمد نشده باشد. • شیلنگ های ورود آب را صاف کنید. • فیلتر را در شیلنگ ورود آب تمیز کنید.
آب بعد از اینکه چرخه شستشو کامل شد ماده لباسشویی در داخل کشوی ماده لباسشویی باقی می ماند	• مطمئن شوید که ماشین لباسشویی با فشار آب کافی کار می کند. • مطمئن شوید که شوینده را در وسط کشوی شوینده بریزید.
لرزش دارد و یا زیادی پر سروصداست	• مطمئن شوید که ماشین لباسشویی بر روی یک سطح هموار گذاشته شده باشد. اگر سطح هموار نیست، پایه های ماشین لباسشویی را تنظیم کنید تا هم تراز شود. • مطمئن شوید که پیچ های حمل و نقل جدا شده باشند. • مطمئن شوید که ماشین لباسشویی با شیئی دیگری تماس نداشته باشد. • مطمئن شوید که توده لباس ها توازن داشته باشند.
ماشین لباسشویی تخلیه نمی کند و/یا چرخش ندارد	• شیلنگ تخلیه را صاف کنید. شیلنگ های گره خورده را باز کنید. • مطمئن شوید که فیلتر کثافات مسدود نشده باشد.
درجه قفل شده و یا باز نمی شود.	• درجه تا ۳ دقیقه بعد از اینکه ماشین متوقف شده و یا خاموش شود باز نخواهد شد.

اگر مشکل ادامه پیدا کرد، با خدمات محلی مشتریان Samsung تماس بگیرید.

عیب یابی و کدهای اطلاعاتی

کدهای اطلاعاتی

اگر ماشین لباسشویی درست کار نمی کند، ممکن است یک کد اطلاعاتی را در نمایشگر مشاهده کنید. اگر چنین اتفاقی افتاد، لطفاً به جدول زیر مراجعه کرده و راه حل توصیه شده را قبل از تماس با خدمات مشتریان اجرا کنید.

علامت کد	راه حل
dE	- مطمئن شوید که درجه به طور محکم بسته شده باشد. - مطمئن شوید که لباسی در درجه گیر نکرده باشد.
4E	- مطمئن شوید که شیر جریان آب باز شده باشد. - فشار آب را کنترل کنید. - فیلترهای توری شیلنگ آب را تمیز کنید.
5E	- فیلتر کثافات را تمیز کنید. - مطمئن شوید که شیلنگ تخلیه به طور صحیح نصب شده باشد. - فیلتر توری شیلنگ آب را تمیز کنید.
UE	توده لباس نامتوازن است. لباس ها را پخش کنید. اگر تنها لازم است که یک تکه لباس شسته شود، از قبیل یک رب دشامبر ویا شلوار جین، نتیجه چرخش نهایی ممکن است قابل قبول نبوده و یک پیغام خطای "UE" در پنجره نمایش ظاهر خواهد شد.
cE/3E/Uc	با خدمات پس از فروش تماس بگیرید.

برای هرکدی که در بالا ذکر نشده ویا در صورتیکه راه حل پیشنهادی مشکل را حل نکرد، با مرکز تعمیرات Samsung ویا فروشنده Samsung محلی خود تماس بگیرید.

جدول چرخه شستشو

جدول چرخه شستشو

(● گزینش کاربر)

برنامه	حداکثر مقدار لباس (کیلوگرم)		شوینده			سرعت چرخش (حداکثر) دور در دقیقه
	P149SIH	F14SIH / F14SWH	پیش شستشو	شستشو	نرم کننده	
Cotton/Auto Load (الی ف نخ/توده لب ساتومیتیک)	۹.۰	۸.۰	بله	●	●	۱۴۰۰
Synthetics (الیاف مصنوعی)	۳.۰	۳.۵	بله	●	●	۱۲۰۰
Denim (پارچه جین)	۳.۰	۳.۰	بله	●	●	۸۰۰
Bedding (رختخواب)	۴.۰	۴.۰	بله	●	●	۸۰۰
Dark Garment (پوشاک تیره)	۴.۰	۴.۰	بله	●	●	۱۲۰۰
Daily Wash (شستشوی روزانه)	۴.۰	۴.۰	بله	●	●	۱۴۰۰
Eco Drum Clean (تمیز کردن مقرون به صرفه نشئت)	-	-	-	●	●	۴۰۰
Super Eco Wash (شستشوی بسیار مقرون به صرفه)	۴.۰	۴.۰	بله	●	●	۱۲۰۰
Outdoor Care (پوشاک در هوای آزاد)	۴.۰	۴.۰	-	●	●	۱۲۰۰
Baby Care (مراقبت از کودک)	۴.۰	۴.۰	بله	●	●	۱۴۰۰
Wool (پشمی)	۴.۰	۴.۰	-	●	●	۸۰۰
Handwash (شستشو با دست)	۴.۰	۴.۰	-	●	●	۴۰۰

برنامه	حباب مقرون به صرفه	تأخیر در خامه	اتو کردن آسان	شدید	خیس خوردن	شستشوی سریع	چرخه شستشوی من
Cotton/Auto Load (الی ف نخ/توده لب ساتومیتیک)	●	●	●	●	●	●	●
Synthetics (الیاف مصنوعی)	●	●	●	●	●	-	●
Denim (پارچه جین)	●	●	●	●	●	-	●
Bedding (رختخواب)	●	●	●	●	●	-	●
Dark Garment (پوشاک تیره)	●	●	●	●	-	-	●
Daily Wash (شستشوی روزانه)	●	●	●	●	●	-	●
Eco Drum Clean (تمیز کردن مقرون به صرفه نشئت)	-	●	-	-	-	-	-
Super Eco Wash (شستشوی بسیار مقرون به صرفه)	●	●	●	●	●	-	●
Outdoor Care (پوشاک در هوای آزاد)	●	●	-	-	-	-	●
Baby Care (مراقبت از کودک)	●	●	●	●	●	-	●
Wool (پشمی)	●	●	-	-	-	-	●
Handwash (شستشو با دست)	●	●	-	-	-	-	●

- یک چرخه با پیش شستشو تقریباً ۱۷ دقیقه بیشتر طول می کشد.
- داده های طول مدت چرخه شستشو تحت شرایطی حساب شده که در استاندارد IEC60456/EN60456 مشخص شده است. لطفاً Calibration Mode (حالت اندازه گیری) را بعد از نصب اجرا کنید (به صفحه ۲۰ مراجعه شود).
- الیاف نخ ۴۰، ۶۰ درجه سانتی گراد + شدید + Eco bubble برنامه هایی برطبق EN60456 می باشند.
- شستشوی روزانه : برنامه کوتاه برای موسسات آزمایشی.
- مدت شستشو در منازل مختلف ممکن است با مقادیری که در این جدول ذکر شده تفاوت داشته باشد که به خاطر تنوع در فشار و دمای جریان آب.
- مقدار لباس ها و نوع لباسشویی است.
- هنگامیکه عملکرد شستشوی شدید انتخاب شده. مدت چرخه شستشو برای هر چرخه افزایش پیدا می کند.

ضمیمه

جدول مراقبت از پارچه

علائم زیر دستورالعمل های مراقبت از لباس را نشان می دهند. برچسب های مراقبت شامل چهار علامت به ترتیب زیر است: شستشو، سفید کردن، خشک و اتو کردن (و در صورت لزوم، خشک شویی). استفاده از علائم موجب یکنواختی در بین تولیدکننده های پوشاک داخلی و اقلام وارداتی می شود. از دستورالعمل های برچسب مراقبت برای تمدید عمر لباس و کاهش مشکلات لباسشویی پیروی کنید.

	مواد مقاوم		می توان در حداکثر ۱۰۰ درجه سانتی گراد اتو کرد
	پارچه ظریف		اتو نشود
	می توان در ۹۵ درجه سانتی گراد شست		می توان با استفاده از هر محلولی خشک شویی کرد
	می توان در ۶۰ درجه سانتی گراد شست		فقط با پریکلورید، سوخت فندک، الکل خالص ویا R113 خشکشویی شود
	می توان در ۴۰ درجه سانتی گراد شست		فقط با سوخت هواپیما، الکل خالص ویا R113 خشکشویی شود
	می توان در ۳۰ درجه سانتی گراد شست		خشکشویی نشود
	می توان با دست شست		به طور مسطح خشک شود
	فقط خشکشویی شود		برای خشک کردن می توان آویزان کرد
	می توان در آب سرد رنگبری کرد		بر روی رخت آویز خشک شود
	رنگبری نشود		ماشین خشک کن با حرارت عادی
	می توان در حداکثر ۲۰۰ درجه سانتی گراد اتو کرد		ماشین خشک کن با حرارت کم
	می توان در حداکثر ۱۵۰ درجه سانتی گراد اتو کرد		از خشک کن استفاده نشود

محافظت از محیط زیست

- این دستگاه با استفاده از مواد بازیابی شده تولید شده است. اگر تصمیم گرفتید که این دستگاه را به دور بیندازید، لطفاً از مقررات محلی دفع زباله پیروی کنید. سیم برق را ببرید تا نتوان دستگاه را به منبع برق وصل کرد. دریچه را جدا کنید تا حیوانات و کودکان خردسال در داخل دستگاه حبس نشوند.
- از مقدار پودر رختشویی که در دستورالعمل های سازنده پودر رختشویی توصیه شده تجاوز نکنید.
- از محصولات پاک کردن لکه و مواد رنگبر قبل از چرخه شستشو تنها زمانی استفاده کنید که کاملاً لازم باشد.
- با ظرفیت کامل بشویید تا در مصرف آب و برق صرفه جویی شود (مقدار دقیق بستگی به برنامه ای دارد که استفاده می کنید).

اعلامیه سازگاری

این اسباب خانگی با استانداردهای ایمنی اروپایی، EN Standard 60335 و EC directive 93/68 سازگار است.

مشخصات

ماشین لباسشویی با درب از جلو		نوع	
P149SIH	F14SIH / F14SWH	نام مدل	
عرض ۶۰۰ x عمق ۶۰۰ x ارتفاع ۸۵۰ (میلی متر)		ابعاد	
۵۰ تا ۸۰۰ کیلوپاسکال		فشار آب	
۵۴ لیتر	۴۸ لیتر	ظرفیت آب	
۶۶ کیلوگرم	۶۵ کیلوگرم	وزن خالص	
۹/۰ کیلوگرم	۸/۰ کیلوگرم	ظرفیت شستشو و چرخش	
۱۵۰ وات	۲۲۰ ولت	شستشو	مصرف نیرو
۱۵۰ وات	۲۴۰ ولت		
۲۰۰۰ وات	۲۲۰ ولت	شستشو و گرم کردن	
۲۴۰۰ وات	۲۴۰ ولت		
۳۵۰ وات	۲۳۰ ولت	گردش	
۳۴ وات	پمپ		
۱۴۰۰	دور در دقیقه		
		سرعت گردش	

ظاهر و مشخصات این محصول بدون اطلاع قبلی برای منظورات بهبود محصول قابل تغییر هستند.

یادداشت

یادداشت



سوال ویا اظهار نظر؟

کشور	تماس بگیرید	ویا از ما به صورت آنلاین دیدن کنید
IRAN	021-8255	www.samsung.com

شماره کد DC68-03147M-03_FA